

REF #	Part #	Part Description	QTY
1	50001929	CABINET END - BLACK	2
2	50002198	CABINET FORM - BLACK	4
22	50000816	IGNITOR KIT (Push Button Included)	1
23	50003514	LID ASSY REAR - Also send p/n 50000355.	1
24	50000355	PIVOT PIN & BOLT SET - Send with lid assembly	1
25	50001452	LID ASSY FRONT - Also send p/n 50000355.	1
26	50000177	LID BUMPERS	4
27	50002034B	BRACKET; LOWER ASSY DOOR - PIVOTED	2
28	50002032B	BRACKET; UPPER DOOR - PIVOTED	2
29	50002029	1/4 NYLON WASHER	2
30	50002191	DOOR ASSY - S/S (door + magnet)	2
31	50000326	ANCHOR NUT	2
32	50000191	SHOULDER SCREW #8-15 PAN QUAD X5/8	2
33	50002031	FASCIA BLACK FRONT PANEL	1
34	50000802	WARMING RACK (ENAMEL)	1
35	50001643	TEMPERATURE GAUGE	1
36	50000984B	SHELF FRONT S/S RIGHT	1
37	50000986B	SHELF FRONT LEFT S/S	1
38	50001418	SUPPORT SHELF BLACK - Left rear & right front	2

CF9055_3B

39	50001419	SUPPORT SHELF BLACK - Right rear & left front	2
40A	50001413B	SHELF TOP; SOLID.	2
41	50000090	CASTER	4
42	50000313	DOOR HANDLE; DELUXE.	2
43	50000877	HEAT PLATE (ENAMEL)	4
44	50001226	COOKING GRIDS (SET OF 3)	1
N/A	VC303-3576	BBQ COVER	1
N/A	50003432	CONSOLE REPAIR KIT	1
N/A	VC703-1284	29 ROTISSERIE KIT	1
N/A	VCGP1A	GRIDDLE - replaces one cooking grid.	1
3	50001838	STRUT	2
4	50001916	PANEL TANK	1
5	50001876B	HEAT SHIELD, CABINET	1
6	50001917B	HEAT SHIELD, HOSE	1
7	50001814	BASE ASSY	1
8	50001844B	SUPPORT FOR GREASE PAN	2
9	50002155	GREASE PAN	1
N/A	50001845	GREASE CUP	1
10	50000856B	HEAT SHIELD	1
11	50001818B	FRONT LIP	1
12	50000879B	FLASH TUBE	1
N/A	50003100	BURNER TUBE with SHORT ELECTRODE	2

CF9055_3B

N/A	50003133	BURNER TUBE with LONG ELECTRODE	2
N/A	50003457	BURNER REPAIR KIT	1
14	50000523	ELECTRODE MAIN, LONG	2
15	50000431	ELECTRODE MAIN, SHORT	2
16	50000892	BURNER GASKET	4
17	50001196	CONSOLE ASSY	1
18A	50000801	VALVE ASSY - LP	1
18B	50000850	VALVE ASSY - NG	1
19A	50002127	REGULATOR, SINGLE - 24 LONG	1
19C	50000198	HOSE 12 - NG	1
20	50001327	BEZEL	4
21	50000853	UPPER REAR PANEL	1

WoodmansPartsPlus.com