


Dutchwest NC Wood Stove Service




DUTCHWEST
EST. 1974

Dutchwest Non-Catalytic Interior Fireback Service

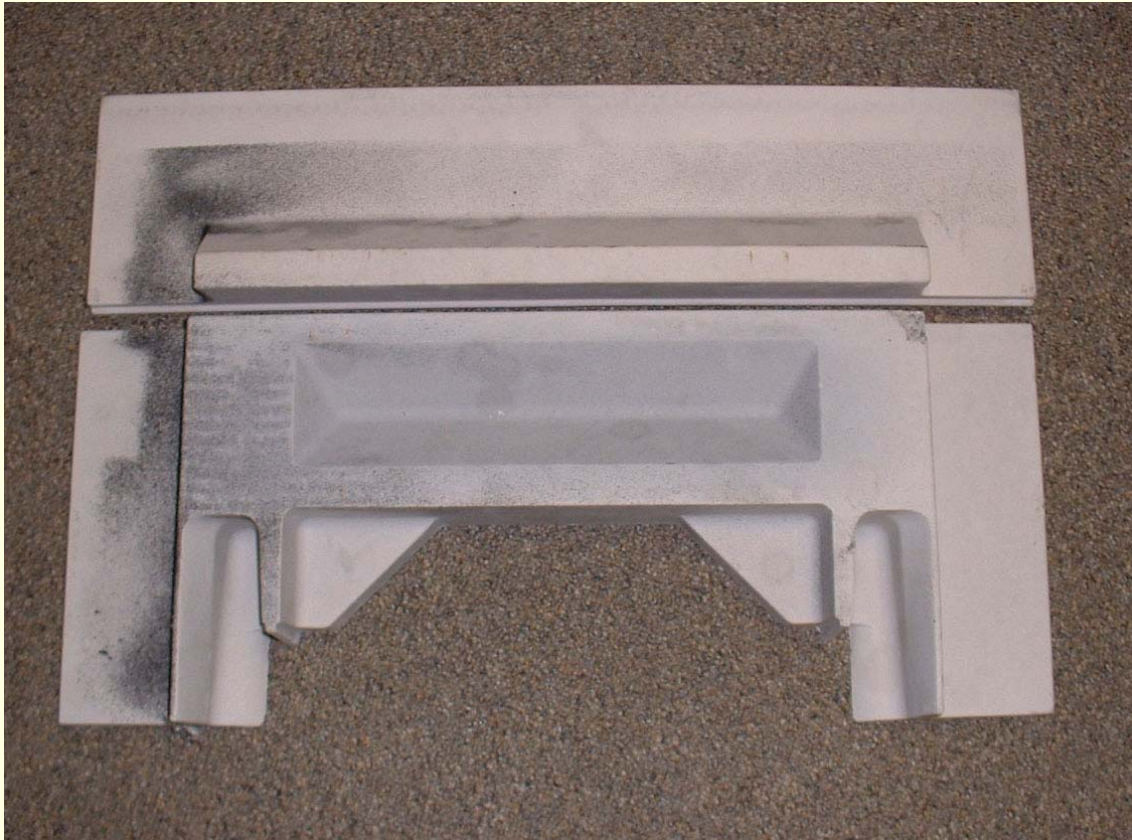

Upper and
lower fireback
refractories
removed from
the stove

Fountain and Shoe

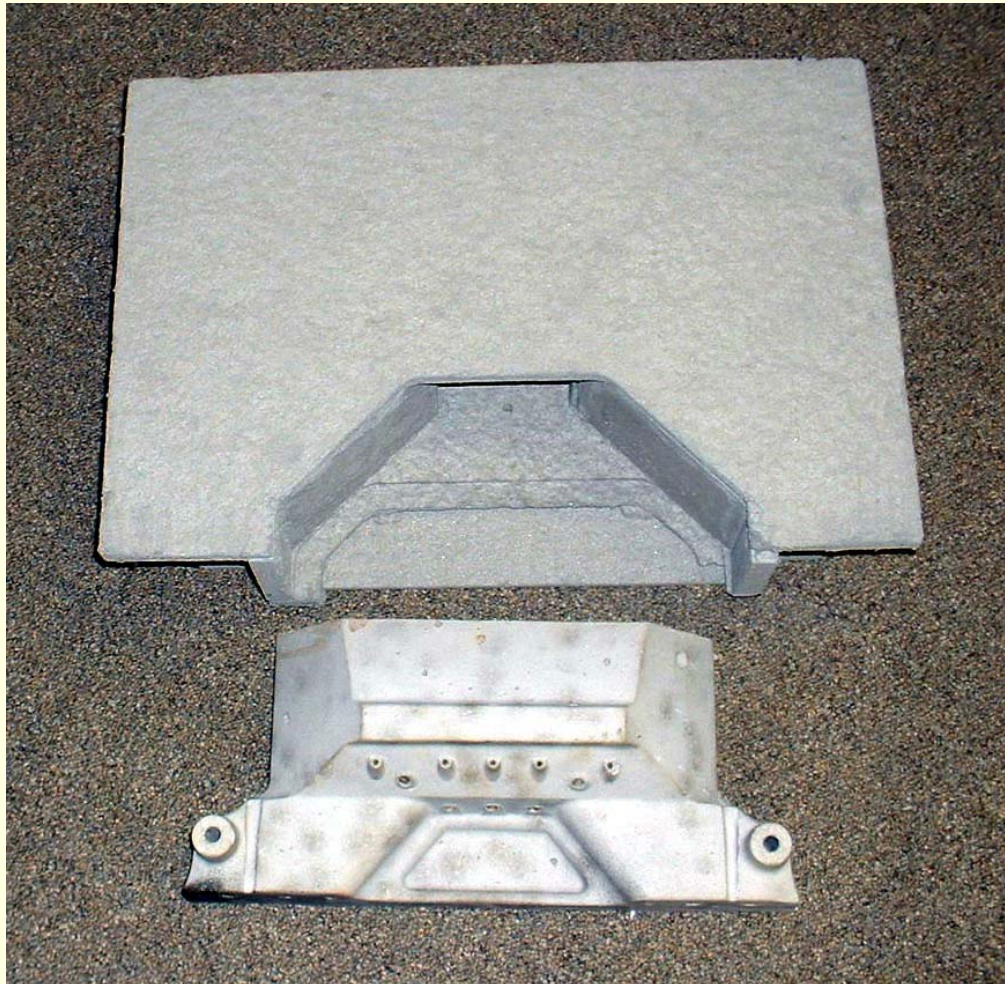


Fountain and Shoe shown out of the stove.
Front view of Fountain and
Top view of Shoe

Remove Andirons




Lift the left and right andirons out of the inner bottom

Remove Grate

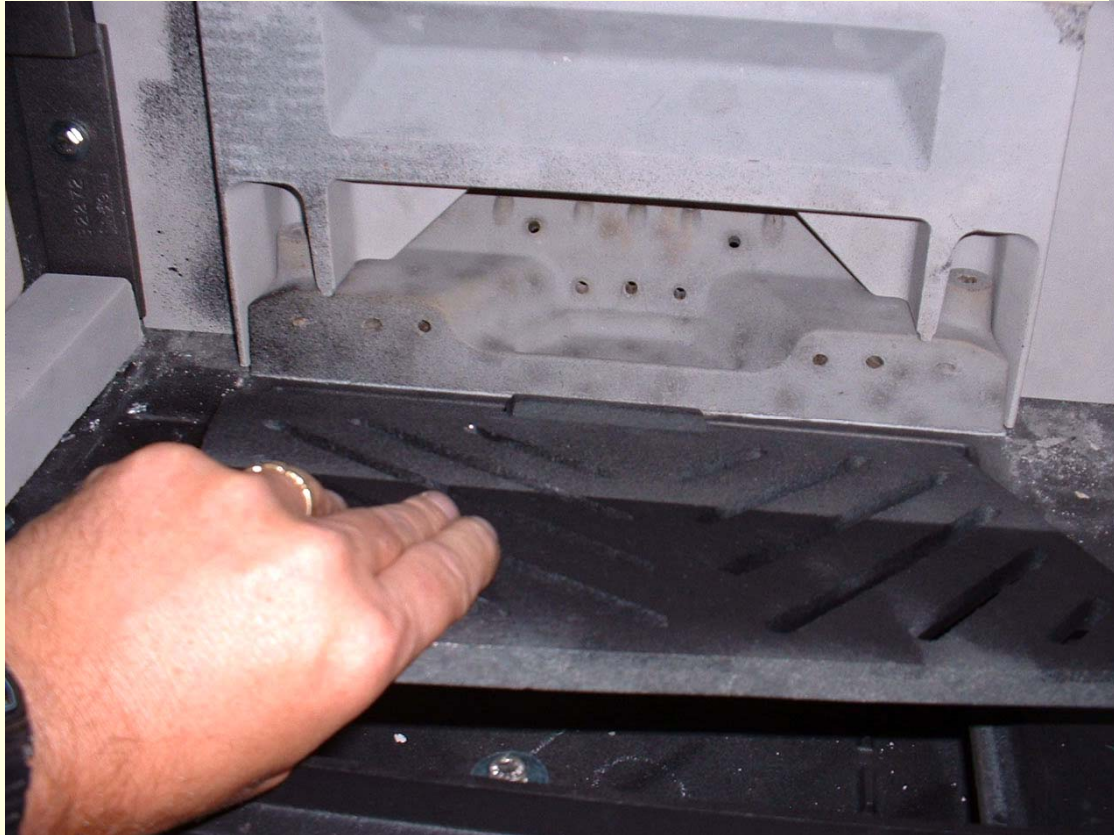

Lift up grate and remove. Notice the retainer on the rear top of the grate which holds the Shoe in place.

Right End Refractory

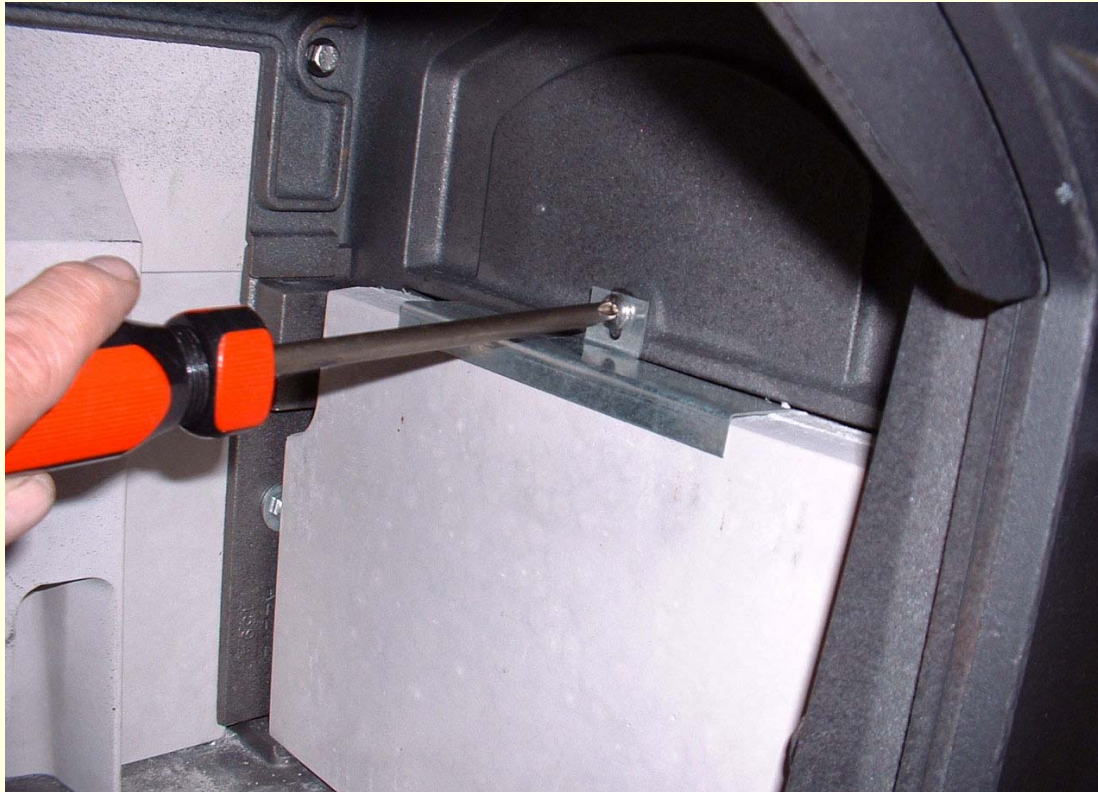

With a Phillips screwdriver, remove the brick support bracket and the right end Refractory. Then insulation panel can be removed.

Remove Shoe



Grip the front of the shoe and carefully pull it forward out of the opening of the lower fireback refractory

Remove Lower Load Door Refractory



Lift out the lower load door refractory which sits on the inner bottom against the left side

Remove Rear Sheet Metal Shroud

- Remove the rear sheet metal shroud. It is held in place with two Phillips head bolts located in the center of the shroud below the flue collar.



Rear of stove with shroud removed

Remove Fireback Retainer




With 7/16" socket wrench, remove the two interior bolts with washers & nuts on exterior back of stove then lift out fireback retainer

Remove Lower Retainers




With a 7/16" socket wrench, remove the interior bolts with washer and nut on the exterior back of the stove for left and right lower retainer. Lift out the retainers. Make sure refractories do not fall forward.

Remove Upper Fireback Refractory

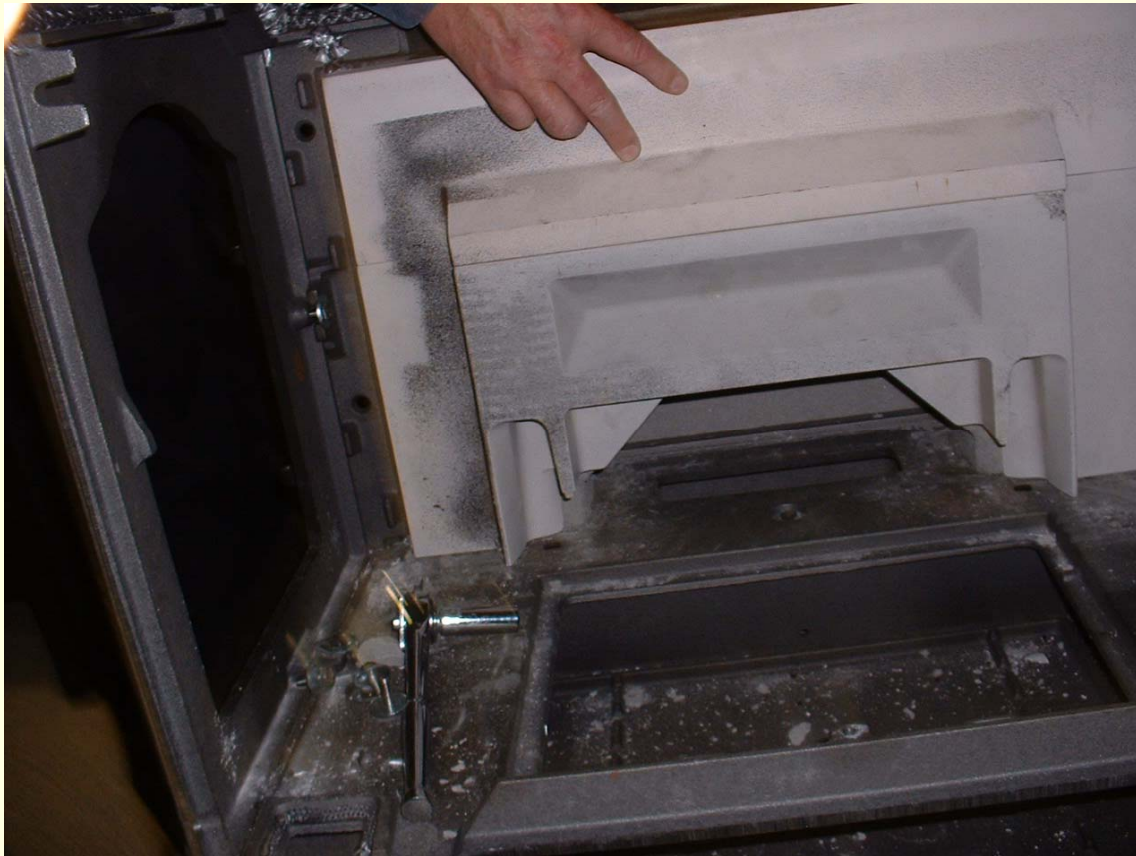


Lift up and out to remove the upper fireback refractory. **Do not** let the lower fireback refractory fall forward.

Remove Lower Fireback Refractory

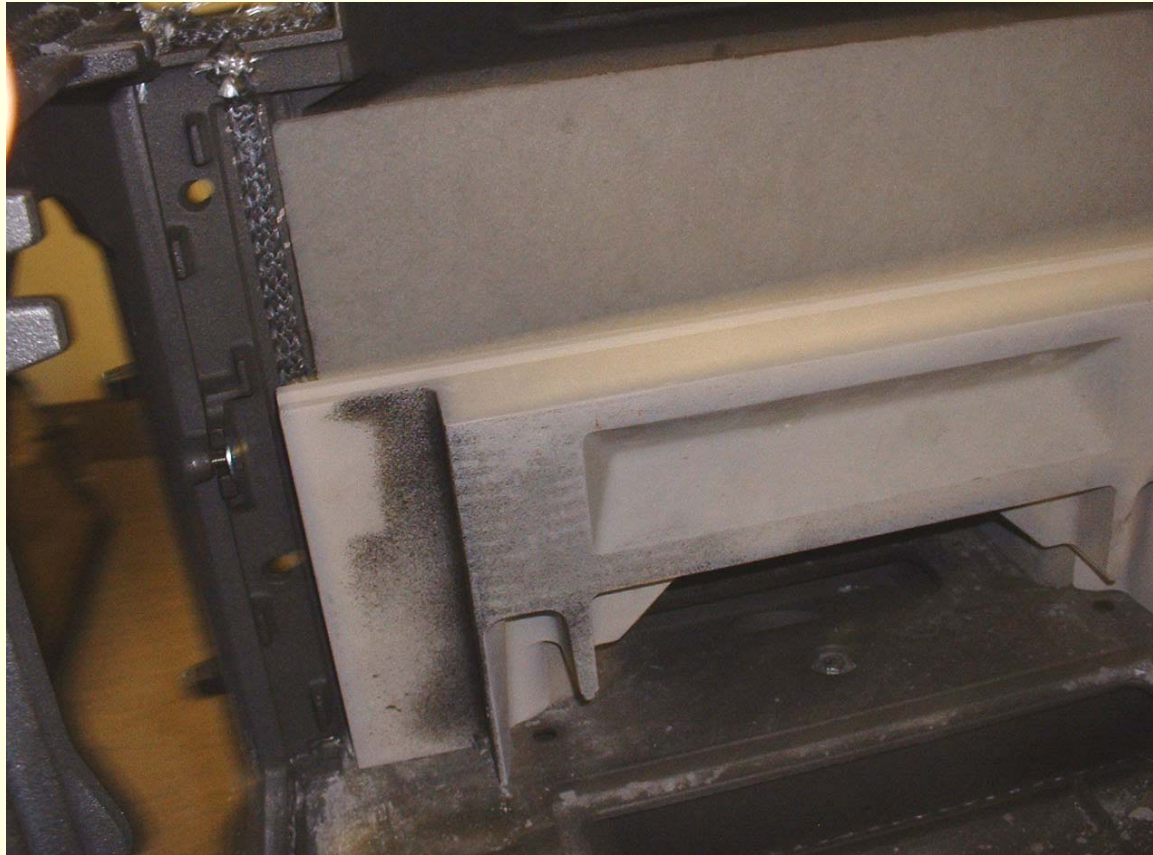

Pull forward to remove the Lower Fireback Refractory.

Remove Fountain

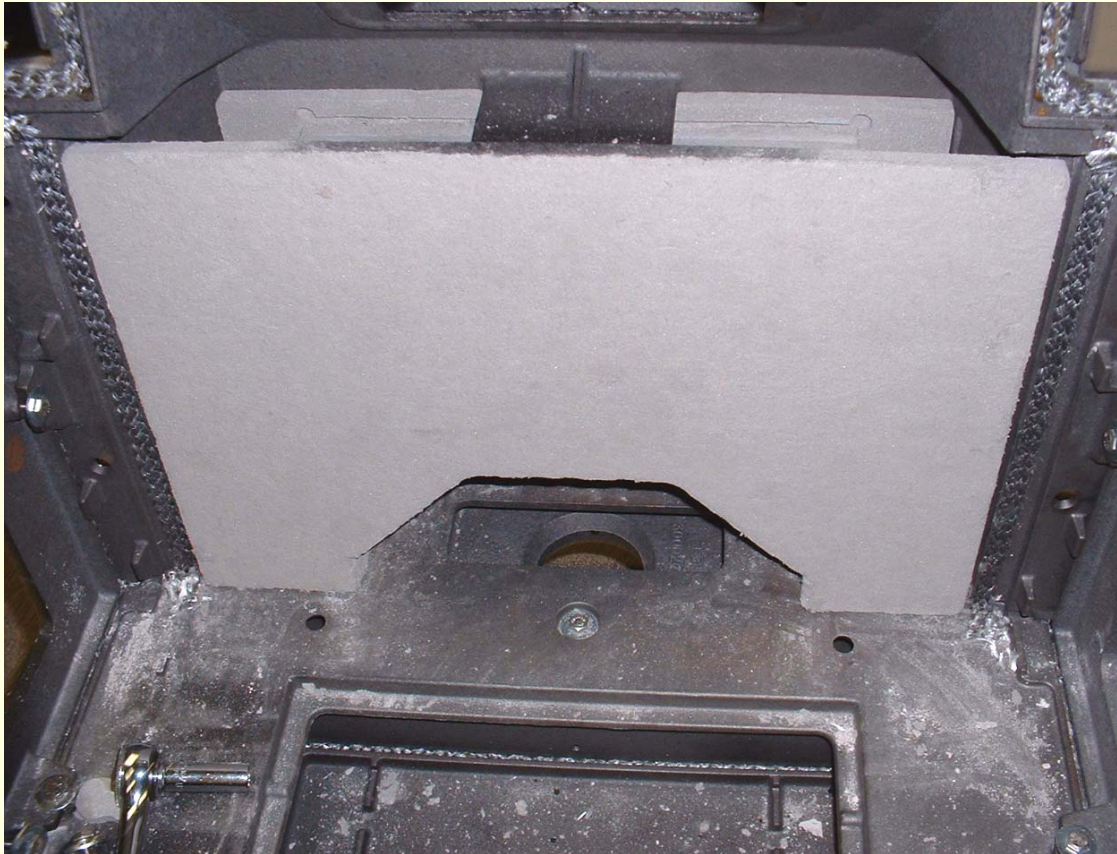

Reach to the back of the fountain and gently pull it forward and out of the box. The fountain is fragile so handle with care.