

REPLACEMENT PARTS

#	PART NO.	DESCRIPTION
1	W497-0002	PLASTIC DIFFUSER
2	W062-0019	FAN / HEATER ASSEMBLY
3	W380-0016	THERMOSTAT KNOB
4	W387-0005	75 WATT QUARTZ LIGHT BULB
5	W435-0006	FLAME EFFECT MOTOR
6	W660-0040	THERMOSTAT SWITCH
7	W660-0023	MAIN POWER SWITCH
8	W010-1266	FLAME EFFECT ASSEMBLY
9	GL-648	LOG SET
10	W135-0227	LOG #1 - RIGHT LOG
11	W135-0228	LOG #2 - LEFT LOG
12	W200-0162	SCREEN COVER
13	W215-0077	FLAME EFFECT
14	W300-0078	GLASS

EF31 ACCESSORIES

Use only accessories designed for and listed with the EF31 model.

#	PART NO.	DESCRIPTION
15	E31S	SCREEN KIT