

Empire DVS-36 and DVS-42 Part List

**PARTS LIST**

Index No.	Part Number	Description	Index No.	Part Number	Description
1	10816	UPPER CLEARANCE SPACER	34	11454	FIREBOX BACK (DVS-42 DVS-42IP)
2	11450	TOP STANDOFF (DVS-36 DVS-36IP)	35	11378	REAR LOG SUPPORT (DVS-36 DVS-36IP)
2	11451	TOP STANDOFF (DVS-42 DVS-42IP)	35	11379	REAR LOG SUPPORT (DVS-42 DVS-42IP)
3	10988	VENT COVER PLATE ASSEMBLY	36	11371	GRATE ASSEMBLY (2 REQUIRED)
4	11406	OUTER WRAPPER TOP (DVS-36 DVS-36IP)	37	P-253	ORIFICE FITTING
4	11425	OUTER WRAPPER TOP (DVS-42 DVS-42IP)	38	P-255	#53 ORIFICE - LP (DVS-36 DVS-36IP)
5	10776	TOP HEAT SHIELD (DVS-36 DVS-36IP)	38	P-256	#41 ORIFICE - NAT (DVS-36 DVS-36IP)
5	10777	TOP HEAT SHIELD (DVS-42 DVS-42IP)	38	P-258	#1.55mm ORIFICE - LP (DVS-42 DVS-42IP)
6	11404	OUTER WRAPPER - LEFT (DVS-36 DVS-36IP)	38	P-257	#40 ORIFICE - NAT (DVS-42 DVS-42IP)
6	11423	OUTER WRAPPER - LEFT (DVS-42 DVS-42IP)	39	R-5675	AIR SHUTTER LP
7	11403	OUTER WRAPPER BACK (DVS-36 DVS-36IP)	39	R-5676	AIR SHUTTER NAT
7	11422	OUTER WRAPPER BACK (DVS-42 DVS-42IP)	40	P-251	COUPLING (NAT ONLY)
8	11405	OUTER WRAPPER - RIGHT (DVS-36 DVS-36IP)	41	11359	BURNER BOX ASSEMBLY (DVS-36 DVS-36IP)
8	11424	OUTER WRAPPER - RIGHT (DVS-42 DVS-42IP)	41	11360	BURNER BOX ASSEMBLY (DVS-42 DVS-42IP)
9	10779	CORNER SHIELD	42	11499	BURNER SUPPORT - LEFT
10	10054	JUNCTION BOX WELDED ASSEMBLY (DVS-36IP DVS-42IP)	43	11377	BURNER SUPPORT - RIGHT
11	10018	AIR DILLUTION COVER PLATE	44	R-5705	PILOT ASSEMBLY - NATURAL (DVS-36 DVS-42)
12	11449	CORNER BRACE 2	44	R-5706	PILOT ASSEMBLY - LP (DVS-36 DVS-42)
13	11448	CORNER BRACE 1	44	R-5747	PILOT ASSEMBLY - NATURAL (DVS-36IP DVS-42IP)
14	11401	OUTER WRAPPER BOTTOM WELDED ASSEMBLY (DVS-36 DVS-36IP)	44	R-5748	PILOT ASSEMBLY - LP (DVS-36IP DVS-42IP)
14	11420	OUTER WRAPPER BOTTOM WELDED ASSEMBLY (DVS-42 DVS-42IP)	45	11411	FIREBOX BOTTOM WELDED ASSEMBLY (DVS-36)
15	10586	LOUVER ASSEMBLY - UPPER (DVS-36 DVS-36IP)	45	11430	FIREBOX BOTTOM WELDED ASSEMBLY (DVS-42)
15	10588	LOUVER ASSEMBLY - UPPER (DVS-42 DVS-42IP)	45	11439	FIREBOX BOTTOM WELDED ASSEMBLY (DVS-36-IP)
16	10898	GLASS FRAME ASSEMBLY (DVS-36 DVS-36IP)	45	11447	FIREBOX BOTTOM WELDED ASSEMBLY (DVS-42-IP)
16	10951	GLASS FRAME ASSEMBLY (DVS-42 DVS-42IP)	46	R-4053	DOOR LATCH (2 REQUIRED)
17	10587	LOUVER ASSEMBLY - LOWER (DVS-36 DVS-36IP)	47	R-5454	GAS VALVE - NATURAL (DVS-36 DVS-42)
17	10589	LOUVER ASSEMBLY - LOWER (DVS-42 DVS-42IP)	47	R-5455	GAS VALVE - LP (DVS-36 DVS-42)
18	R-5137	ADAPTER PIPE	47	R-5745	GAS VALVE - NATURAL (DVS-36IP DVS-42IP)
19	M-169	8" ADAPTER GASKET	47	R-5746	GAS VALVE - LP (DVS-36IP DVS-42IP)
20	10900	AIR DROP BACK ASSEMBLY	48	R-3436	REMOTE/OFF/ON SWITCH (DVS-36 DVS-42)
21	10554	NAILING FLANGE (4 REQUIRED)	49	UH-810	TRANSFORMER MOUNTING BRACKET (DVS-36IP DVS-42IP)
22	11222	AIR DROP FRONT ASSEMBLY	50	R-1995	TRANSFORMER (DVS-36IP DVS-42IP)
23	CI-364	BLOW PLATE ASSEMBLY (DVS-36 DVS-36IP)	51	UH-451	JUNCTION BOX COVER (DVS-36IP DVS-42IP)
23	10945	PRESSURE DOOR RELIEF ASSEMBLY (DVS-42 DVS-42IP) (2 REQUIRED)	52	UH-273	JUNCTION BOX (DVS-36IP DVS-42IP)
24	11452	BLOW PLATE BRACKET (DVS-36 DVS-36IP) (2 REQUIRED)	53	R-5160	CORD SET - 18" (DVS-36IP DVS-42IP)
24	11452	BLOW PLATE BRACKET (DVS-42 DVS-42IP) (4 REQUIRED)	54	R-1616	MODULE (DVS-36IP DVS-42IP)
25	M-170	FLUE OUTLET GASKET	55	R-5730	LOG - LEFT FRONT (DVS-36 DVS-36IP)
26	10976	DIVERTER OUTLET TUBE	55	R-5736	LOG - LEFT FRONT (DVS-42 DVS-42IP)
27	10893	FIREBOX TOP ASSEMBLY (DVS-36 DVS-36IP)	56	R-5731	LOG - RIGHT FRONT (DVS-36 DVS-36IP)
27	10944	FIREBOX TOP ASSEMBLY (DVS-42 DVS-42IP)	56	R-5737	LOG - RIGHT FRONT (DVS-42 DVS-42IP)
28	10798	COMBUSTION DOME DIVERTER (DVS-36 DVS-36IP)	57	R-5732	LOG - MIDDLE (DVS-36 DVS-36IP)
28	10799	COMBUSTION DOME DIVERTER (DVS-42 DVS-42IP)	57	R-5738	LOG - MIDDLE (DVS-42 DVS-42IP)
29	10993	HEATER BAFFLE	58	R-5734	LOG - BRANCH (DVS-36 DVS-36IP)
30	11218	SUPPORT COLUMN - LEFT (DVS-36 DVS-36IP)	58	R-5740	LOG - BRANCH (DVS-42 DVS-42IP)
30	11220	SUPPORT COLUMN - LEFT (DVS-42 DVS-42IP)	59	R-5733	LOG - REAR (DVS-36 DVS-36IP)
31	10788	FIREBOX SIDE - LEFT (DVS-36 DVS-36IP)	59	R-5739	LOG - REAR (DVS-42 DVS-42IP)
31	10790	FIREBOX SIDE - LEFT (DVS-42 DVS-42IP)	NOT SHOWN	11281	VENTURI TARGET (NAT ONLY)
32	10789	FIREBOX SIDE - RIGHT (DVS-36)	NOT SHOWN	R-3435A	WIRE ASSEMBLY
32	10791	FIREBOX SIDE - RIGHT (DVS-42)	NOT SHOWN	11440	INLET TUBING ASSEMBLY (DVS-36IP DVS-42IP)
33	11219	SUPPORT COLUMN - RIGHT (DVS-36 DVS-36IP)	NOT SHOWN	11413	INLET TUBING ASSEMBLY (DVS-36 DVS-42)
33	11221	SUPPORT COLUMN - RIGHT (DVS-42 DVS-42IP)	NOT SHOWN	11497	SHIPPING PLATE (DVS-36 DVS-36IP)
34	11453	FIREBOX BACK (DVS-36 DVS-36IP)	NOT SHOWN	11498	SHIPPING PLATE (DVS-42 DVS-42IP)
			NOT SHOWN	10983	DECORATIVE ROCK
			NOT SHOWN	11548	ROCK WOOL (2 REQUIRED)
			NOT SHOWN	R-5751	WIRE ASSEMBLY (DVS-36IP DVS-42IP)
			NOT SHOWN	R-721B	WIRE HARNESS
			NOT SHOWN	R-4459	MAGNET (2 REQUIRED)

USE ONLY MANUFACTURER'S REPLACEMENT PARTS. USE OF ANY OTHER PARTS COULD CAUSE INJURY OR DEATH.  
DVS-36/DVS-42