

ITEM	QTY	DESCRIPTION	FC1600
1	1	ASH PAN DRAWER	FC16-B
2	1	FURNACE SHELL	FCOS16SHELL
3	1	PANEL SIDE OUTER RIGHT	FC16-2
4	2	STARTER COLLAR 10"	FCOS10COLLAR
5	1	BLOWER HOUSING BASE	FC16-38
6	1	STARTER COLLAR 12"	SNGCLR12
7	1	BLOWER HOUSING COVER	FC16-37
8	1	FAN LIMIT CONTROL BOX	FCFLC
9	1	OUTER BACK PANEL	FC16S-4
10	1	INNER TOP PANEL	FC16S-5
11	1	HINGE	FCH1800
12	1	PANEL HEAT DUMP INNER	FC000-34
13	1	PANEL HEAT DUMP LID	FC000-33
14	5	HEAT DUMP SPRING BRACKET	FCHDSB
15	1	MACHINE SCREW	FCFLAB
16	1	ADAPTOR PLATE	N/A
17	1	TOP OUTER PANEL	FC16S-3
18	1	PANEL TOP C CHANNEL	FC16-36
19	1	PANEL INNER LEFT AND RIGHT	FC16S-6
20	1	PANEL OUTER SIDE LEFT	FC16S-1
21	1	FUEL DOOR ASSEMBLY	FCFD16A
22	1	PANEL DOOR	FC16-30

PARTS LIST		
ITEM	QTY	DESCRIPTION
1	1	BLOWER WHEEL
2	1	BLOWER HOUSING
3	1	MOTOR CAPACITOR
4	1	BLOWER MOTOR