

## FCOS2200D PARTS LIST

*Repair Part Number are shown in "Bold" type*

1. Chimney Anchor Plate (included with installation kit)
2. Heat Dump – Cap with Hardware
- 2a. Fuselink - **FCFUSELINK**
3. Firebox Shell – FCOS22SHELL
4. Extension Springs for Heat Dump (2)
5. Left Side Panel with Insulation
6. Roof Panel
7. Right Side Panel with Insulation
8. Inner Hat Channel
9. Back Panel
10. Hinges – **FCCA26015041H**
11. Weather Resistant Front Door
12. Starter Collar for 10" Insulated Heat Duct – **FCOS10COLLAR** (2 included)
13. Starter Collar for 12" Cold Air Return - **SNGCLR12** (1 included)
14. Wood Grates - **FCWG**
15. By-Pass Damper Rod
16. By-Pass Damper Plate
17. Spring Handle - **FCOSSPRHAND**
18. Fuel Door Handle - **FCFDH**
19. Fuel Door Latch
20. Face Plate Panel
21. Bottom Blower Housing Cover
- 21a. Blower Housing Cover
22. Natural Draft Tube - **FCNDTUBE**
23. Erie Motor - **FCEM**
24. Spin Draft w/hardware - **FCOSSD**
25. Fuel Door with Fire Chief Logo - FCFD
- 25a. Door Pin – **FCDP**
- 25b. Fuel Door Gasket, 5/8" – **FCGSKT58** (not shown)
26. Fan Limit Center - **FCFLC8"**
27. Fan Limit Box & Cover - **FCOSFLCBOX**
28. Blower Motor w/Capacitor - **FCOSMOTOR**
29. Blower Housing - **FCBH**
30. Hitch Pin for Damper Rod
31. Ash Drawer
32. Electrical Control Center – **FC22ECC**
33. Vented Bottom Panel
34. Door Handle – **FCOSTHANDLE**
35. Latch Cam
36. Guy Wire D-Ring - **FCOSDRING**