

Woodman's Parts Plus
www.woodmanspartsplus.com

Fire Magic Grill E660S-A Parts List

Item	Description	E660s		E790s		E1060s	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
1.	Stainless cooking grid (set of 2 or 3)	3544-S-3	1	3539-S-3	1	23539-S-2	2
2.	Flavor grid (set of 3 or 4)	3057-S-3	1	3056-S-3	1	3056-S-4	1
3.	Main burner	3041-50	3	3041-50	3	3041-50	4
4.	Heatshield kit	24177-05	3	24177-05	3	24177-05	4
5.	Silicone gasket	24177-06	3	24177-06	3	24177-06	4
6.	Infrared burner *	3050	1	3050	1	3050	1
7.	Oven lid	24193-55	1	24189-55	1	24183-55	1
or	Oven lid w/ window	24193-54	1	24188-54	1	24183-54	1
8.	Window (only)*‡	24187-45	1	24187-45	1	24187-45	1
9.	Warming rack	36735-M	1	36755-M	1	36745-M	1
10.	Back burner assembly	24794-02	1	24789-02	1	24784-02R/L	1
11.	Back burner cover	24794-010	1	24789-010	1	24784-010	2
12.	Zone separator	3061-S	2	3061-S	2	3061-S	3
13.	Heavy-duty rotisserie motor	3600-05M	1	3600-05M	1	3600-05M	1
14.	Heavy-duty rod	3606-40	1	3609-40	1	3607-40	1
15.	Heavy-duty rod knob	24187-16	1	24187-16	1	24187-16	1
16.	Meat holder (pair)	3613	1	3613	1	3613	1
17.	Counterbalance	3620E	1	3620E	1	3620E	1
18.	Grid lifter	3519	1	3519	1	3519	1
19.	Convertible regulator	PR-4	1	PR-4	1	PR-4	1
20.	Control panel w/ back burner, raceway, and wire harness †	24394-15	1	24389-15	1	24384-15	1
21.	Valve manifold w/ back burner	24393-22	1	24388-22	1	24383-22	1
22.	Small knob	24182-42	2	24182-42	2	24182-42	3
23.	Large knob	24182-41	3	24182-41	3	24182-41	4
24.	LED disk (small)	24182-64	2	24182-64	2	24182-64	3
25.	LED disk (large)	24182-63	3	24182-63	3	24182-63	4
26.	Oven hood thermometer ‡	23305	1	23305	1	23305	1
or	Grill top thermometer (window models) ‡	3573	1	3573	1	3573	1
27.	Power supply w/ outlet †	24387-18	1	24387-18	1	24387-18	1
28.	Drip tray	3087	1	3087	1	3087	1
29.	Drip tray liner (set of 4)	3557	1	3557	1	3557	1
30.	Wire harness for raceway ‡	24194-26	1	24189-26	1	24184-26	1
31.	Back burner electrode *‡	4199-52	1	4199-52	1	4199-52	2

* If equipped

‡ Not shown

† Add (M) to part number for power hood

Woodman's Parts Plus
www.woodmanspartsplus.com

Item	Description	E660s		E790s		E1060s	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
32.	Electrode ‡	3199-72	3	3199-72	3	3199-72	4
33.	Natural gas orifice(s) ‡	3001-42-3	1	3001-38-3	1	3001-40-4	1
34.	Natural back burner gas orifice(s) ‡	3001-53-1	1	3001-51-1	1	3001-53-2	1
35.	Propane gas orifice(s) ‡	3001-54-3	1	3001-53-3	1	3001-53-4	1
36.	Propane back burner gas orifice(s) ‡	3001-63-1	1	3001-57-1	1	3001-63-2	1
37.	Natural smoker orifice ‡	3003-68-1	1	3003-68-1	1	3003-68-1	1
38.	Propane smoker orifice ‡	3003-77-1	1	3003-77-1	1	3003-77-1	1
39.	Smoker drawer assembly	24182-45	1	24182-45	1	24182-45	1
40.	12v / 10 watt halogen bulb ‡	24187-15	2	24187-15	2	24187-15	3
41.	Light lens ‡	24187-26	2	24187-26	2	24187-26	3
42.	Lamp assembly ‡	24187-28	2	24187-28	2	24187-28	3
43.	Power hood motor assembly *	24183-18	1	24183-18	1	24183-18	1
44.	Power hood rocker switch *	24187-39	1	24187-39	1	24187-39	1
45.	Light switch	24182-46	1	24182-46	1	24182-46	1
46.	Light microswitch	24187-20	1	24187-20	1	24187-20	1
	or Power hood light & motor microswitch	24187-44	1	24187-44	1	24187-44	1
47.	Flash tube (left) ‡	24187-29	1	24187-29	1	24187-29	1
48.	Flash tube (right) ‡	24187-35	2	24187-35	2	24187-35	3
49.	Flex connector ‡	3030-08	1	3030-08	1	3030-08	1
50.	Tool holder	25387-12	1	25387-12	1	25387-12	1
51.	Paper towel holder	25387-11	1	25387-11	1	25387-11	1
52.	Propane tank tray (propane models only)	25386-21	1	25386-21	1	25386-21	1
53.	Propane regulator with hose (propane models only)	5110-15	1	5110-15	1	5110-15	1
54.	Quick-disconnect hose ‡ (natural models only)	5110-03	1	5110-03	1	5110-03	1
55.	Power cord ‡	25387-13	1	25387-13	1	25387-13	1
56.	Folding shelf	24336-15	1	24336-15	1	24336-15	1
57.	Fire Magic® cookbook ‡	3595	1	3595	1	3595	1

* If equipped

‡ Not shown

SINGLE SIDEBURNER UNIQUE PARTS LIST

Item	Description	E660s		E790s		E1060s	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
58.	Sideburner (burner only) ‡	3279-32	1	3279-32	1	3279-32	1
59.	Sideburner assembly w/ shelf	24336-16	1	24336-16	1	24336-16	1
60.	Sideburner grid	3552	1	3552	1	3552	1
61.	Sideburner cap	3275-36	1	3275-36	1	3275-36	1
62.	Sideburner lid	24336-31	1	24336-31	1	24336-31	1

‡ Not shown

DOUBLE SIDEBURNER UNIQUE PARTS LIST

Item	Description	E660s		E790s		E1060s	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
20.	Main control panel w/ raceway and wire harness †	24394-15	1	24389-15	1	24384-15	1
21.	Main valve manifold	24193-22	1	24188-22	1	24383-28	1
58.	Double sideburner valve manifold	3281-22	1	3281-22	1	3281-22	1
59.	Double sideburner (only) ‡	3279-32	2	3279-32	2	3279-32	2
60.	Double sideburner grid	3529-S	1	3529-S	1	3529-S	1
61.	Sideburner cap	3275-36	2	3275-36	2	3275-36	2
62.	Double sideburner cover	3281-07	1	3281-07	1	3281-07	1
63.	Convertible regulator (for double sideburner valve manifold)	PR-4	1	PR-4	1	PR-4	1
64.	Double sideburner control panel	N/A		N/A		23281-12	1
65.	Double sideburner wire harness extension ‡	34394-19	1	34394-19	1	34394-19	1

* If equipped

‡ Not shown

† Add (M) to part number for power hood control panel

POWER BURNER UNIQUE PARTS LIST

Item	Description	E1060s	
		Part No.	Qty.
20.	Main control panel w/ raceway and wire harness †	24384-16	1
21.	Main valve manifold	24383-28	1
58.	Power burner valve manifold	3278-14	1
69.	Power burner (only)	3278-01B	1
60.	Power burner grid - stainless steel	3545-S	1
OR	Power burner grid - porcelain cast	3545	1
61.	Power burner collimator	3279-09	1
62.	Power burner cover	3278-06	1
63.	Convertible regulator (for power burner valve manifold)	PR-4	1
64.	Power burner control panel	23278-10	1
65.	Power burner wire harness extension ‡	34384-19	1

* If equipped

‡ Not shown

† Add (M) to part number for power hood control panel