

Fire Magic Grill E660i Parts List

Item	Description	E660I		E790I		E1060I	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
1.	Stainless cooking grid (set of 2 or 3)	3544-S-3	1	3539-S-3	1	23539-S-2	2
2.	Flavor grid (set of 3 or 4)	3057-S-3	1	3056-S-3	1	3056-S-4	1
3.	Main burner	3041-50	3	3041-50	3	3041-50	4
4.	Heatshield kit	24177-05	3	24177-05	3	24177-05	4
5.	Silicone gasket	24177-06	3	24177-06	3	24177-06	4
6.	Infrared burner *	3050	1	3050	1	3050	1
7.	Oven lid	23738-53	1	23745-53	1	23747-53	1
or	Oven lid w/ window	24193-54	1	24188-54	1	24183-54	1
8.	Window (only) †‡	24187-45	1	24187-45	1	24187-45	1
9.	Warming rack	36735-M	1	36755-M	1	36745-M	1
10.	Back burner assembly	24794-02	1	24789-02	1	24784-02R/L	1
11.	Back burner cover	24794-010	1	24789-010	1	24784-010	2
12.	Zone separator	3061-S	2	3061-S	2	3061-S	3
13.	Heavy-duty rotisserie motor	3600-05M	1	3600-05M	1	3600-05M	1
14.	Heavy-duty rod	3606-40	1	3609-40	1	3607-40	1
15.	Heavy-duty rod knob	24187-16	1	24187-16	1	24187-16	1
16.	Meat holder (pair)	3613	1	3613	1	3613	1
17.	Counterbalance	3620E	1	3620E	1	3620E	1
18.	Grid lifter	3519	1	3519	1	3519	1
19.	Convertible regulator	PR-4	1	PR-4	1	PR-4	1
20.	Valve manifold w/ back burner	24193-22	1	24188-22	1	24183-22	1
21.	Control panel w/ back burner and raceway †	24194-10	1	24189-10	1	24184-10	1
or	Control panel w/ back burner, raceway, and wire harness †	24194-12	1	24189-12	1	24184-12	1
22.	Small knob	24182-42	1	24182-42	1	24182-42	2
23.	Large knob	24182-41	3	24182-41	3	24182-41	4
24.	LED disk (small)	24182-64	1	24182-64	1	24182-64	2
25.	LED disk (large)	24182-63	3	24182-63	3	24182-63	4
26.	Digital thermometer	24182-12	1	24182-12	1	24182-12	1
27.	Meat probe	24187-14S	1	24187-14S	1	24187-14S	1
28.	Power supply w/ connector †	24187-18	1	24187-18	1	24187-18	1

\* If equipped

‡ Not shown

† Add (M) to part number for power hood

Item	Description	E660I		E790I		E1060I	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
29.	Drip tray	3087	1	3087	1	3087	1
30.	Drip tray liner (set of 4)	3557	1	3557	1	3557	1
31.	Wire harness for raceway ‡	24194-47	1	24189-47	1	24184-47	1
32.	Back burner electrode *‡	4199-52	1	4199-52	1	4199-52	2
33.	Electrode ‡	3199-72	3	3199-72	3	3199-72	4
34.	Thermometer wire harness ‡	24187-13	1	24187-13	1	24187-13	1
35.	Natural gas orifice(s) ‡	3001-42-3	1	3001-38-3	1	3001-40-4	1
36.	Natural back burner gas orifice(s) ‡	3001-53-1	1	3001-51-1	1	3001-53-2	1
37.	Propane gas orifice(s) ‡	3001-54-3	1	3001-53-3	1	3001-53-4	1
38.	Propane back burner gas orifice(s) ‡	3001-63-1	1	3001-57-1	1	3001-63-2	1
39.	Natural smoker orifice ‡	3003-68-1	1	3003-68-1	1	3003-68-1	1
40.	Propane smoker orifice ‡	3003-77-1	1	3003-77-1	1	3003-77-1	1
41.	Wood chip box assembly	24182-45	1	24182-45	1	24182-45	1
42.	12V / 10 watt halogen light bulb ‡	24187-15	2	24187-15	2	24187-15	3
43.	Light lens ‡	24187-26	2	24187-26	2	24187-26	3
44.	Lamp assembly ‡	24187-28	2	24187-28	2	24187-28	3
45.	Power hood motor assembly *	24183-18	1	24183-18	1	24183-18	1
46.	Power hood rocker switch*	24187-39	1	24187-39	1	24187-39	1
47.	Lighted master shut-off switch	24182-46	1	24182-46	1	24182-46	1
48.	Light microswitch	24187-20	1	24187-20	1	24187-20	1
	or Power hood light & motor microswitch	24187-44	1	24187-44	1	24187-44	1
49.	Flash tube (left) ‡	24187-29	1	24187-29	1	24187-29	1
50.	Flash tube (right) ‡	24187-35	2	24187-35	2	24187-35	3
51.	Flex connector ‡	3030-08	1	3030-08	1	3030-08	1
52.	Support screw (set of 2)	24182-47	1	24182-47	1	24182-47	1
53.	Fire Magic® cookbook ‡	3595	1	3595	1	3595	1
54.	Wire harness extension	24182-53	1	24182-53	1	24182-53	1

\* If equipped

‡ Not shown