

- | | |
|--|--|
| 1. Legs. | 31. Swing Cover. |
| 2. Front Base Strip. | 32. Collar Top. |
| 3. Side and Back Base Strips. | *33. Upper Back Ventilating Flue. |
| 4. Jointless Ash Pit Base. | *34. Lower Back Ventilating Flue. |
| 5. Lower Front Draft Door,
Nickel. | *35. Back Damper Box. |
| 6. Draft Door Hinge Plate. | *36. Back Damper. |
| 7. Fire Pot. | *37. Screw Turnkey for Back
Damper. |
| *8. Upper Section of Fire Pot
(Loose Ring). | 38. Steel Drum. |
| 9. Side Foot Rails. | 39. Right Nickel Wing. |
| 10. Front Foot Rail. | 40. Left Nickel Wing. |
| 11. Division Plate. | 41. Feed Door Panel, Nickel. |
| 12. End Section Combustion
Ring. | 42. Top Nickel Ring. |
| 13. Middle Section Combustion
Ring. | 43. Urn. |
| 14. Front Fire Pot Ring. | 44. Mica Slide Knob. |
| 15. Back Fire Pot Ring. | 45. Feed Door Handle. |
| 16. Base Door. | 46. Long Duplex Grate Bar. |
| 17. Base Door Handle. | 47. Short Duplex Grate Bar. |
| 18. Small Rosette Knob. | 48. Round Part of Grate. |
| 19. Main Front. | *50. Cog Wheels. |
| 20. Outside Mica Frame. | *51. Wood Grate. |
| 21. Mica Slide. | *52. Drum Lugs. |
| *22. Left Drum Strip. | *53. Shaker, Nickel. |
| *23. Right Drum Strip. | *54. Grate (less Draw Center). |
| 24. Poker Door. | *55. Draw Center Part of Grate. |
| *25. Poker Door Hinge. | |
| 26. Upper Half Feed Door. | *56. Front Drum Ring. |
| 27. Lower Half Feed Door. | *57. Back Drum Ring. |
| *28. Smoke Curtain. | *58. Inside Drum Ring. |
| *29. Smoke Curtain Hinge. | *59. Collar Top. |
| 30. Cover. | |

} For Stove
1½ Sec-
tions
High.

Articles marked * not shown in Cut.