

Harman Fireluxe DV Parts List

<b>PART NAME (FINISH SPECIFIC)</b>	<b>PART NUMBER</b>		
	CLASSIC BLACK	SAND ENAMEL	BLACK ENAMEL
TOP	3-00-787001	3-00-787001-15	3-00-787001-16
LEFT SIDE	3-00-787003	3-00-787003-15	3-00-787003-16
RIGHT SIDE	3-00-787004	3-00-787004-15	3-00-787004-16
FRONT	3-00-787005	3-00-787005-15	3-00-787005-16
LEFT DOOR	3-00-787006	3-00-787006-15	3-00-787006-16
RIGHT DOOR	3-00-787007	3-00-787007-15	3-00-787007-16
LEG	3-00-787012	3-00-787012-15	3-00-787012-16
ASHLP	3-00-787013	3-00-787013-15	3-00-787013-16
TOP COOKING GRATE - OVAL	N/A	N/A	3-00-787015-16
OPTIONAL TOP FLUE FILLER PLATE KIT	1-00-787002-1	1-00-787002-15	1-00-787002-16
OPTIONAL WARMING SHELF KIT	1-00-05896-1	1-00-05896-15	1-00-05896-16
OPTIONAL LEAF TRIM KIT	1-00-05898-55	N/A	1-00-05898-16
OPTIONAL LEAF WARM. SHELF INSERT KIT	1-00-05899-1	N/A	1-00-05899-16
OPTIONAL TOP COOKING GRATE - LEAF	N/A	N/A	3-00-787025-16

<b>(COMMON PARTS)</b>	ALL FINISHES
LOWER FIREBACK	3-00-787008
BAFFLE	3-00-787009
RELIEF DOOR LEFT	3-00-787010
RELIEF DOOR RIGHT	3-00-787011
RELIEF DOOR GASKET	3-44-787000
GLASS PANEL	3-40-21001500
GLASS GASKET-6.5'	3-44-00539
BURNER ASSEMBLY (LOG BASE)	3-40-787025
LEFT FRONT LOG	3-40-787030
RIGHT FRONT LOG	3-40-787031
LEFT REAR LOG	3-40-787032
RIGHT REAR LOG	3-40-787033
EMBER 1-MEDIUM	3-40-787035
EMBER 2-LARGE	3-40-787036
EMBER 3-SMALL	3-40-787034
PILOT ASSEMBLY	3-40-00787
THERMOCOUPLE*	3-40-09906
VALVE-NG	3-40-00064
VALVE-LP	3-40-00057
REMOTE CONTROL HANDSET	3-20-07800
VALVE CONTROL MODULE	3-20-07801
COOKING BURNER IGNITION WIRE	3-40-94739
COOKING BURNER IGNITION MODULE	3-40-25847
COOKING BURNER RING W/ELECTRODE	3-40-07802
COOKING BURNER GAS VALVE	3-40-07803
PROPANE CONVERSION KIT	1-00-05893
NATURAL GAS CONVERSION KIT	1-00-05894
OPTIONAL BLOWER KIT	1-00-05895

\*This is a quick response thermocouple. Replace it only with Part No. 3-40-09906