

JA580

REF #	Part #	Part Description	QTY
1	50001075	CABINET BOTTOM ASSY	1
2	50000974	CABINET END LEFT	1
22	50000880B	FLASH TUBE	1
23	50000898	FRONT DRAWER ASSY	1
24	50000823	GREASE PAN 580	1
25	50001328	CONTROL KNOB	5
26	50000804	REGULATOR - LP	1
27	50001418	SUPPORT SHELF BLACK - Left rear & right front	2
28	50001419	SUPPORT SHELF BLACK - Right rear & left front	2
29	50000984B	SHELF FRONT S/S RIGHT	1
30	50000986B	SHELF FRONT S/S LEFT	1
31	50000824	SHELF TOP	2
32a	50001036	SIDE BURNER ASSY - LP	1
32b	50001032	SIDE BURNER ASSY - NG	1
N/A	50000113	SIDE BURNER - CONTROL KNOB	1
N/A	50001046	SIDE BURNER - VALVE LP	1
N/A	50001045	SIDE BURNER - VALVE NG	1
N/A	50000111	SIDE BURNER - ROTARY IGNITOR	1
N/A	50000070	SIDE BURNER - IGNITOR KNOB	1
N/A	50001044	SIDE BURNER - BURNER	1
N/A	50001035	SIDE BURNER - BURNER GRATE	1

JA580

N/A	50001056	SIDE BURNER - HARDWARE KIT	1
33	50000826B	SHELF INSERT	2
34	50000313	HANDLE DOOR	2
35	50000777	HEAT PLATE S/S	5
36	50000889	WARMING RACK (ENAMEL)	1
37	50000355	PIVOT PIN & BOLT SET - Send with lid assy	1
38	50000177	LID BUMPER	6
39	50001077	REAR PANEL LOWER	1
40	50001227	COOKING GRIDS (PACK OF 4)	1
41	50001093	LID ASSY FRONT - Also send p/n 50000355.	1
42	50001643	TEMPERATURE GAUGE	1
43	50000915	CONNECTOR HOSE NG	1
44	500001198	12 HOSE NG	1
45	50001327	KNOB BEZEL	5
N/A	50000882	HARDWARE BAG	1
N/A	50003434	CONSOLE REPAIR KIT	1
3	50000978	CABINET END RIGHT	1
4	50000979	CABINET TOP	1
5	50000980B	DOOR	2
6	50000983	CABINET END WRAP	2
7	50000797	DRAWER SUPPORT RIGHT	1
8	50000798	DRAWER SUPPORT LEFT	1

JA580

9	50001177	BASE ASSY	1
10	50003516	LID ASSY REAR - Also send p/n 50000355.	1
11	50001235	CONSOLE	1
19a	50000809	CASTER (SCREW IN) - Threaded or pop-in?	4
19b	50000090	CASTER (POP IN) - Threaded or pop-in?	4
N/A	50001324	CASTER NUT REPAIR KIT	1
13a	50001098	VALVE ASSY - LP	1
13b	50001086	VALVE ASSY - NG	1
14	50003100	BURNER TUBE with SHORT ELECTRODE	2
N/A	50003133	BURNER TUBE with LONG ELECTRODE	3
N/A	50003457	BURNER REPAIR KIT	5
15	50001619	IGNITOR MODULE Does not include push button	1
16	50001011	IGNITOR PUSH BUTTON (Send with 50001619)	1
17	50001014	WIRE 10 POSITIVE	1
18	50001015	WIRE 10 NEGATIVE	1
19	50000892	BURNER GASKET	5
20	50000431	ELECTRODE MAIN SHORT	2
21	50000523	ELECTRODE MAIN LONG	3