

Jotul 404 Parts List

Pos	Part no.	Description			
1	100897	Leg	48	120004	Washer, flat
2	100871	Base plate	49	117452	Washer, Ø8,4x20x1,5mm
3	100872	Cleaning hatch	50	116945	Screw, M6x22mm 990 ^c
4	100873	Back panel	51	117099	Screw, M6x25mm
5	100874	Panel, right side	52	116909	Screw, 8x30mm
6	100875	Panel, left side	53	117004	Nut, M8 9931
7&8	153152	Front, complete	54	116894	Screw, M6x16mm
9	100878	Oven wall, left	55	116832	Nut, M6 9930
10	100879	Oven wall, right	56	116849	Screw, M6x10mm 998
11	100880	Oven top	57	116889	Screw, M5x8mm
12	100881	Oven overplate	58	116908	Screw, M8x25mm
13	100882	Flue divider	59	116951	Screw, M6x40mm
14	100883	Grate carrier	60	116939	Screw, M6x16mm
15	100899	Grate	61	124817	Adapter for smoke outlet
16	100900	Front grate carrier	62	101559	Smoke outlet
18	100884	Flue plate, left	63	126244	Door knob
19	100885	Flue plate, right	64	126229	Sleeve
20	100886	Oven damper	65	124853	Washer klingerit
21	100887	Rear flue flange	66	120293	Baking pan
22	100646	Flue spigot	67	151429	Ash rake
23	100888	Blanking plate, top			
24	100889	Top plate			
25	100890	Spacer, hot plate			
26	100891	Air control			
27	153146	Feeder door, complete 10412			
28	153147	Ash door, complete 150445			
29	153148	Oven door			
30	10141212	Feeder door, baffle			
31	10089814	Hot plate, right, 240mm			
32	150478	Hot plate, left			
33	10089539	Ash lip			
34	123529	Oven bottom			
35	120293	Baking tray			
36	120292	Oven shelf			
37	120288	Oven regulator			
38	120294	Rail			
39	150206	Ashpan			
40	120131	Fire brick, right			
41	120130	Fire brick, lower, left			
42	140253	Fire brick, upper, left			
43	124479	Door knob, base			
44	124478	Tool, hotplate handle			
45	120290	Door catch			
46	120015	Knob			
47	125960	Pin, crommed, Ø6x33mm			