

| Reference Number | Description | Part Number |
|-------------------------|--|--------------------|
| 1 | 120 °F (49 °C) Ceramic Fan Temperature Sensor | EC-001 |
| | Domestic Power Cord - 115V | EC-042 |
| 2 | Auger Motor - 115V | EF-001 |
| 3 | Convection Blower 115V | EF-002 |
| 4 | Fan Temp Sensor 160 °F (71 °C) | EF-013 |
| 5 | High Limit Temp Sensor 200 °F (93 °C) Manual Reset | EF-016 |
| 6 | Vacuum Switch - 115V | EF-017 |
| | Silicone Hose | EF-018 |
| | Aluminum Hose Barb | EF-019 |
| 7 | Auger | EF-025 |
| 8 | Door Handle Complete | EF-028 |
| 9 | Slider Damper Rod with Knob | EF-050 |
| 10 | Glass Set with Tape | EF-062 |
| 11 | Slider Damper Plate | EF-064 |
| 12 | Brass Auger Bushing | EF-065 |
| 13 | Ash Pan Latch (Freestanding) | EF-178 |
| | Pedestal & Ash Pan Gasket - 10' (305 cm) | EF-208 |
| | External Exhaust Back | EF5-143 |
| | External Exhaust Box | EF5-144 |
| | External Exhaust Bottom | EF5-145 |
| | 45° Exhaust Adaptor | EF5-146 |
| | Exhaust Starter Tube 3" x 2½" Long | EF5-147 |
| | Log Set | 20-036 |
| 14 | Control Panel Door | 20-040 |
| | External Exhaust Kit (3" pipe) | 20-070 |
| | 60° Exterior Exhaust Adaptor | 50-096 |
| 16 | Control Panel Touch Latch | 50-323 |
| | Circuit Board Stand Offs | 50-331 |
| 17 | Combustion/ Exhaust Blower - 115V | 50-473 |
| 18 | Stainless Steel Burn Pot Liner - Standard | 50-474 |
| 18 | Stainless Steel Burn Pot Liner - High Ash | 50-587 |
| 19 | Flush Handle for Hopper Lid (Freestanding) | 50-523 |
| 20 | Door | 50-653 |

| | | |
|-----|---|---------|
| 21 | Burn Pot | 50-658 |
| 22 | Ash Pan (Freestanding) | 50-659 |
| 23 | Pedestal (Freestanding) | 50-660 |
| 24 | Cabinet Side Left (Freestanding) | 50-661 |
| 25 | Cabinet Side Right (Freestanding) | 50-670 |
| 26 | Back Grill (Freestanding) | 50-675 |
| 27 | Hopper Lid (Freestanding) | 50-676 |
| 28 | Top Front (Freestanding) | 50-677 |
| 29 | Tube Cleaner Rod | 50-680 |
| 30 | Brick Panel Set | 50-681 |
| 31 | Brick Retainer Set | 50-682 |
| | Owner's Manual - 115V | 50-765 |
| | Technical Manual - 115V | 50-1485 |
| 32 | Cabinet Side - Left (Insert) | 50-823 |
| 33 | Cabinet Side - Right (Insert) | 50-824 |
| 34 | Top Front (Insert) | 50-825 |
| 35 | Ash Pan (Insert) | 50-826 |
| 36 | Hopper Lid (Insert) | 50-827 |
| 37 | Hopper Cover (Insert) | 50-828 |
| 38 | 300 Watt Ignitor 115V | 50-1067 |
| 39 | Circuit Board | 50-1929 |
| | Circuit Board Decal | 50-1930 |
| 40a | Control Panel (No decal) - Insert | 50-2404 |
| 40b | Control Panel (No decal) - Free Standing | 50-2405 |
| | Body Trim Kit - Pewter (Freestanding) | 50-620 |
| | Body Trim Kit - Gold (Freestanding) | 50-621 |
| | Body Trim Kit - Antique Copper (Freestanding) | 50-622 |
| 41 | Door Cover - Painted | 50-683 |
| 41 | Door Cover - Pewter | 50-623 |
| 41 | Door Cover - Gold | 50-624 |
| 41 | Door Cover - Antique Copper | 50-625 |

| | | |
|----|--|--------|
| 42 | Louver Bar Set - Painted | 50-654 |
| 42 | Louver Bar Set - Gold | 50-655 |
| 42 | Louver Bar Set - Pewter | 50-656 |
| 42 | Louver Bar Set - Antique Copper | 50-657 |
| 43 | Lower Cabinet Trim (1 piece) - Painted (Freestanding) | 50-662 |
| 43 | Lower Cabinet Trim (1 piece) - Gold (Freestanding) | 50-663 |
| 43 | Lower Cabinet Trim (1 piece) - Pewter (Freestanding) | 50-664 |
| 43 | Lower Cabinet Trim (1 piece) - Antique Copper (Freestanding) | 50-665 |
| 44 | Upper Cabinet Trim (1 piece) - Painted (Freestanding) | 50-666 |
| 44 | Upper Cabinet Trim (1 piece) - Gold (Freestanding) | 50-667 |
| 44 | Upper Cabinet Trim (1 piece) - Pewter (Freestanding) | 50-668 |
| 44 | Upper Cabinet Trim (1 piece) - Antique Copper (Freestanding) | 50-669 |
| 45 | Top Trim - Painted | 50-671 |
| 45 | Top Trim - Gold | 50-672 |
| 45 | Top Trim - Pewter | 50-673 |
| 45 | Top Trim - Antique Copper | 50-674 |
| 46 | Regular Panel Set (Insert) | 50-769 |
| 47 | Oversized Panel Set (Insert) | 50-770 |
| | Trim Kit - Pewter (Insert) | 50-771 |
| | Trim Kit - Antique Copper (Insert) | 50-772 |
| | Trim Kit - Gold (Insert) | 50-773 |
| 48 | Regular Panel - Left (Insert) | 50-817 |
| 49 | Regular Panel - Right (Insert) | 50-818 |
| 50 | Regular Panel - Top (Insert) | 50-819 |
| 51 | Oversized Panel - Left (Insert) | 50-820 |
| 52 | Oversized Panel - Right (Insert) | 50-821 |
| 53 | Oversized Panel - Top (Insert) | 50-822 |