

COMFORT FLAME 3 and 5 Plaque Infrared Heaters

MODELS: GWRN18TC, GWRP16TC, GWRN18C, GWRP16C, GWRN30TC, GWRP26TC, GWRN30C, GWRP26C

	Part Number	Description
1	107673-01	Front Panel (3 Plaque)
	107676-01	Front Panel (5 Plaque)
2	103476-01	Grill Guard (3 Plaque)
	103476-02	Grill Guard (5 Plaque)
3	**	Apron
4	104103-07	Reflector (3 Plaque)
	104103-09	Reflector (5 Plaque)
5	**	Cabinet Back Panel
6	097159-04	Piezo Ignitor
7	099066-02	Mounting Bracket
8	098271-03	Ignitor Cable
9	107896-01	Heat Sheild LP
	107896-02	Heat Sheild NG
10	111421-01	Snap Bushing
11	107889-01	Base Feet
12	099415-18	Gas Regulator LP
	099415-19	Gas Regulator NG
13	104819-02	Regulator Bracket
14	098522-24	Thermostat Gas Valve
15	102394-02	T-stat Valve Mounting Bracket
16	103256-02	Inlet Tube
17	118721-03	Upper Baffle (3 Plaque Manual)
	118721-04	Upper Baffle (5 Plaque Manual)
18	098462-01	Control Rod Assembly
19	098325-01	Roll Pin
20	098354-03	Control Knob
PARTS AVAILABLE — NOT SHOWN		
	100642-03	Hardware Assembly

COMFORT FLAME 3 and 5 Plaque Infrared Heater Burner Assembly

MODELS: GWRN18TC, GWRP16TC, GWRN18C, GWRP16C, GWRN30TC, GWRP26TC, GWRN30C, GWRP26C

	Part Number	Description
3-Plaque Manual Burner Assembly		
1	120630-02	ODS/Pilot LP
	120630-03	ODS/Pilot NG
2	098200-03	Control Valve Bracket
3	105051-01	Pilot Tubing
4	099218-08	Burner
5	098508-01	Valve Retainer Nut
6	099056-24	Orifice - Plaque A NG
	099056-25	Orifice - Plaque A LP
7	099056-01	Orifice - Plaque B LP
	099056-02	Orifice - Plaque B NG
8	103844-01	Control Valve
9	103352-03	Tubing - Valve to Plaque
10	103352-04	Tubing - Valve to Plaque
11	107660-01	Tube, Inlet
5-Plaque Manual Burner Assembly		
1	120630-02	ODS/Pilot LP
	120630-03	ODS/Pilot NG
2	098200-03	Control Valve Bracket
3	105050-02	Pilot Tubing
4	099218-09	Burner
5	098508-01	Valve Retainer Nut
6	099056-24	Orifice - Plaque A or C NG
	099056-25	Orifice - Plaque A or C LP
7	099056-01	Orifice - Plaque B LP
	099056-02	Orifice - Plaque B NG
8	100747-01	Control Valve
9	107660-03	Inlet Tube
10	103844-01	Tubing - Valve to Plaque
11	103352-05	Tubing - Valve to Plaque
12	103352-04	Tubing - Valve to Plaque
3-Plaque Thermostatic Burner Assembly		
1	120630-02	ODS/Pilot LP
	120630-03	ODS/Pilot NG
2	099387-11	Pilot Tubing
3	104818-03	Outlet Tubing- Valve to Burner
4	099218-08	Burner
5	099056-24	Orifice - Plaque A NG
	099056-25	Orifice - Plaque A LP
6	099056-01	Orifice - Plaque B LP
	099056-02	Orifice - Plaque B NG
5-Plaque Thermostatic Burner Assembly		
1	120630-02	ODS/Pilot LP
	120630-03	ODS/Pilot NG
2	099387-3	Pilot Tubing
3	104818-04	Outlet Tubing- Valve to Burner
4	099218-08	Burner
5	099056-24	Orifice - Plaque A or C NG
	099056-25	Orifice - Plaque A or C LP
6	099056-01	Orifice - Plaque B LP
	099056-02	Orifice - Plaque B NG

www.manspartsplus.com