

Radiance RFSUV34 Freestanding Vent Free Stove Part List

## RFSUV34 Freestanding Vent Free Stove

Ref.	Description	RFSUV34
1.	Log Set Complete	10001763
1a.	Log Ember Front	KR7
1b.	Log Front Left	KR8
1c.	Log Front Right	KR9
1d.	Log Rear	KR10
1e.	Log Top Left	KR11
1f.	Log Top Right	KR12
2.	Lava Rock Burner (Package)	57897
3.	Burner Housing Assembly w/tiles (Nat. & Prop.)	10001493
4a.	Orifice Main Burner (Nat)	See Rating Plate for Orifice Size
4b.	Orifice Main Burner (Prop.)	See Rating Plate for Orifice Size
5.	Fan with bracket	54103
6.	Electrical Cord (6ft)	51865
7.	Fan Temperature Sensor	51704
8.	Speed Control	57138
9.	Speed Control Knob	51882
10.	Pilot Tubing w/fittings (Not Shown)	10000150
11a.	Pilot mV ODS Assembly (Nat.)	55464
11b.	Pilot mV ODS Assembly (Prop.)	10001647
12.	Ignitor Piezzo	20000062
13.	Cable Ignitor (Not Shown)	20000101
14a.	Valve Honeywell RN (Nat)	10000235
14b.	Valve Honeywell RP (Prop)	10000242
15.	Manifold Tubing w/fittings	57318
16.	Top Louvre Assembly	10001370
17.	Frame Window Assembly w/screen	10001751
18.	Control Door Assembly	10001790
19.	Catch Control Door	10001743
20.	Remote Switch Kit (Not Shown)	53858
21.	Remote Switch	53606
22.	Remote Switch Wiring Harness	57265
23.	Grill Cabinet Top	10001791
24.	Door Cabinet Side	10001792
25.	Clamp	10000949
26.	Magnet (Ceramic)	10001705
27.	Rear Log Support (Assembly)	10001680