

1620	Combustor Package	1	14221	Heat Sensor	1
16125	Cast Grate — Right	1	14222	Switch Knob	1
16126	Cast Grate — Left	1	14223	Blower Switch	1
16130	Cooking Surface	1	14226	Ash Catch	1
16135	Flange Plate	1	14231	Left Screen	1
14155	Control Tool	1	14232	Right Screen	1
16160	Ash Pan	1	14239	Outer Door Frame — Black	1
16170	Ash Pan Cover	1	14240	Outer Door Frame — Gold	1
16180	Combustor Cover Plate	1	14111	5 M.M. Etched Glass "ESW"	1
14190	Two-Hold Railing Knob	4	14246	Hinge Pins c/w Washer & Nuts	2
14191	Railing Set Complete	1	14248	Steel Handle c/w Nut	1
14195	One-Hole Railing Knob	4	14249	Spring Handle	1
14200	Damper Knob	2	14250	Door Latch	1
14205	12 ¹³ / ₁₆ " Rod	2	14251	Glass Retainers	6
14210	5" Rod	2			
14215	49 ¹⁶ / ₁₆ " Rod	2			
14220	Blower Assembly c/w Knob	1			

Woodsman's Parts Plus.com