

#715

SCH#	DESCRIPTION	PART #
01	Left side	4201536
02	Left bottom grate	4201556
03	Left and right ash screen	4077055
04	Left furnace paddle	4200536
05	Top of hopper	4201546
06	Half hopper	4201537
07	Back plate	4225864
08	Hopper feeder	4079307
09	Loading valve	4250865
10	Protecting plate	4225879
11	Coal guide plates	4504027
12	Loading valve gasket (1/4" HD) 5'	200025
13	Cooking plate	4250868
14	Fiberglass rope (1/4" LD) 2'	6006034
15	Flue outlet	4225860
16	Butterfly	4225374
17	Butterfly screw	4703194
18	Clean out plate	4072702
19	Clean out gasket	6006034
20	Heat exchanger gasket (1/4" LD) 3'	6006034
21	Heat exchanger	4079154
22	Thermostat protection screen	4404878
23	Split pin	0231480
24	Thermostat cable clamp	4701527
25	Flexible cable	4701759
26	Axis for handle	4701533
27	Mayer thermostat with valve	4009057
28	Thermostat knob	4075344
30	Heat exchanger clip	4404001
31	Right side, cast	4201536
32	Knob for clean out grate	4250839
33	Knob fastener	4705933
34	Right furnace paddle	4200537
35	Grate dump rod	4079215
36	Front half of fire basket	4200648
37	Right bottom grate	4201557
38	Central ash screen	4405082
39	Ashtray	4008192
42	Right panel support	4504028
43	Ash flap	4200494
44	Ash flap hinge	4410696
45	Cast iron front	4225863
46	Support of cabinet	4504011
47	Back half of fire basket	4200492
48	Left panel support	4503988
53	Cast window frame	4250863
54	Outer glass gasket (3/8" HD) 5'	200038
55	Glass	4775101
56	Inner glass gasket	6006034
57	Viewing door	4250867
58	Door gasket (3/8" HD) 5'	200038
59	Hood fastener	4705952
60	Hinge	4074680
61	Stop for top cover	4500664
62	Top cover - cast iron	4250869
63	Ornament	4761581
64	Hood	4079223
65	Side border	4079186
66	Front border	4079187
67	Hinge pin	4705931
69	Rivet	4702469
71	Stove tool	4225858
72	Hook	0628202
73	Poker	4704603
74	Copper iron wire	4705949
75	Socket Screw	4705944
76	Hinge pin	4705932
77	Ash door gasket (3/8" HD)	200038
78	Ashtray door	4205932
79	Attachment plate	4772119
80	Leg	4250864
81	Snap lock	4504045
82	Hexagon nut	0229606
83	Split pin	4705969
84	Axis for door handle	4705959
85	Washer	9976
86	Door knob	4250916
87	Knob pin	4705859