

VC200\_D

REF #	Part #	Part Description	QTY
1	50000425	BASE ASSY	1
2	50000236	BRACE LEG END	2
25A	50000456	TUBE & ORIFICE ASSY (ROTISSERIE) NG	1
25B	50000455	TUBE & ORIFICE ASSY (ROTISSERIE) LP	1
26	50000097	SHELF SIDE LEFT	1
27	50000414	REAR LID ASSY - Also send p/n 50000355.	1
28	50001267	FRONT LID ASSY - Also send p/n 50000355.	1
29	50000096	PANEL BOTTOM - LP MODEL ONLY	1
30	50000095	PANEL BOTTOM PLAIN - LP MODEL	1
N/A	50000095	PANEL BOTTOM PLAIN - NG MODEL	2
31	50000360	WHEEL (SET OF 2)	1
32	50000361	GREASE CUP HOLDER/CUPS (2)	1
33	50000642	GRIP HANDLE SET	1
34	50001643	TEMPERATURE GAUGE	1
35	50000129	PANEL BASE L CHARCOAL	1
36	50000369	PANEL REAR LOWER - BLACK	2
37	50000363	DOOR FRONT CHARCOAL SET	1
38	50000365	LID BUMPERS (SET OF 6)	1
39	50000248	REGULATOR/O.D. ASSY	1

VC200\_D

40	50000355	PIVOT PIN & BOLT SET Send with lid assembly.	1
41	50000746	ROTISSERIE HOUSING/SCREEN ASSY	1
42	50000261	WARMING RACK	1
44A	50000454	TUBE & ORIFICE ASSY (OVEN) - NG	1
44B	50000453	TUBE & ORIFICE ASSY (OVEN) - LP	1
45	50000433	OVEN BURNER ASSY	1
N/A	50001011	IGNITOR - PUSH BUTTON	1
N/A	50000747	ROTISSERIE SMOKER BOX SET	1
N/A	50000399	SUPPORT - ROTISSERIE SPIT ROD	1
N/A	50000286	ROTISSERIE SPIT ROD	1
N/A	50000287	ROTISSERIE WORK KIT	1
N/A	50000541	ROTISSERIE MOTOR BRACKET	1
N/A	50000151	ROTISSERIE BRACKET GUIDE	1
N/A	50000504	TOOL HOLDER	1
N/A	50000027	GREASE PAN	1
N/A	50000443	CONSOLE DECAL	1
N/A	VCRK1A	ROTISSERIE KIT	1
N/A	VC303-3666	BBQ COVER - SALE ITEM	1
3	50000237	BRACE LEG REAR	1
4	50000738	SHELF FRONT	2
5	50000429	CONSOLE 200	1
6	50000038	BURNER ASSY	2

VC200\_D

N/A	50003393	BURNER REPAIR KIT	1
7A	50000919	VALVE ASSY NG	1
7B	50000470	VALVE ASSY LP	1
8	50000356	HEAT PLATES (SET OF 2)	1
9	50000099	SHELF SIDE RIGHT	1
10	50000441	END CAP SHELF RIGHT	1
11	50000442	END CAP SHELF LEFT	1
12	50000431	ELECTRODE MAIN SHORT	1
13	50000523	ELECTRODE MAIN LONG	1
14	50000047	BURNER (ROTISSERIE) ASSY	1
15	50000466	ELECTRODE (ROTISSERIE)	1
16	50000093	AXLE	1
17	50000357	SMOKER BOX ASSY	1
18	50000043B	FLASH TUBE	1
19	50000430	DEFLECTOR (OVEN)	1
20	VCCG1A	COOKING GRIDS (SET OF 3 ONLY)	1
21A	50000130	PANEL BASE R CHARCOAL	1
22	50000439	OVEN ELECTRODE	1
23	50000438	IGNITOR KIT (Push Button NOT included)	1
24	50000076	CONTROL KNOB	4