

VC200_E

| REF # | Part # | Part Description | QTY |
|-------|----------|--|-----|
| 1 | 50000425 | BASE ASSY | 1 |
| 2 | 50000236 | BRACE LEG END | 2 |
| 25A | 50000456 | TUBE & ORIFICE ASSY (ROTISSERIE) NG | 1 |
| 25B | 50000455 | TUBE & ORIFICE ASSY (ROTISSERIE) LP | 1 |
| 26 | 50000097 | SHELF SIDE LEFT | 1 |
| 27 | 50000414 | REAR LID ASSY - Also send p/n 50000355. | 1 |
| 28 | 50001267 | FRONT LID ASSY - Also send p/n 50000355. | 1 |
| 29 | 50000096 | PANEL BOTTOM - LP MODEL ONLY | 1 |
| 30 | 50000095 | PANEL BOTTOM PLAIN - LP MODEL | 1 |
| N/A | 50000095 | PANEL BOTTOM PLAIN - NG MODEL | 2 |
| 31 | 50000360 | WHEEL (SET OF 2) | 1 |
| 32 | 50000361 | GREASE CUP HOLDER/CUPS (2) | 1 |
| 33 | 50000642 | GRIP HANDLE SET | 1 |
| 34 | 50001643 | TEMPERATURE GAUGE | 1 |
| 35 | 50000129 | PANEL BASE L CHARCOAL | 1 |
| 36 | 50000369 | PANEL REAR LOWER - BLACK - SET | 2 |
| 37 | 50000363 | DOOR FRONT CHARCOAL SET | 1 |
| 38 | 50000365 | LID BUMPERS (SET OF 6) | 1 |
| 39 | 50000248 | REGULATOR/O.D. ASSY | 1 |

VC200_E

| | | | |
|-----|------------|--|---|
| 40 | 50000355 | PIVOT PIN & BOLT SET - Send with lid assy. | 1 |
| 41 | 50000746 | ROTISSERIE HOUSING/SCREEN ASSY | 1 |
| 42 | 50000261 | WARMING RACK | 1 |
| 44A | 50000454 | TUBE & ORIFICE ASSY (OVEN) - NG | 1 |
| 44B | 50000453 | TUBE & ORIFICE ASSY (OVEN) - LP | 1 |
| 45 | 50000433 | OVEN BURNER ASSY | 1 |
| N/A | 50001011 | IGNITOR - PUSH BUTTON | 1 |
| N/A | 50000230 | SHELF SUPPORT ASSEMBLY | 2 |
| N/A | 50000399 | SUPPORT - ROTISSERIE SPIT ROD | 1 |
| N/A | 50000286 | ROTISSERIE SPIT ROD | 1 |
| N/A | 50000287 | ROTISSERIE WORK KIT | 1 |
| N/A | 50000541 | ROTISSERIE MOTOR BRACKET | 1 |
| N/A | 50000151 | ROTISSERIE BRACKET GUIDE | 1 |
| N/A | 50000504 | TOOL HOLDER | 1 |
| N/A | 50000027 | GREASE PAN | 1 |
| N/A | 50000443 | CONSOLE DECAL | 1 |
| N/A | VCRK1A | ROTISSERIE KIT | 1 |
| N/A | VC303-3666 | BBQ COVER - SALE ITEM | 1 |
| 3 | 50000237 | BRACE LEG REAR | 1 |
| 4 | 50000738 | SHELF FRONT | 2 |
| 5 | 50000429 | CONSOLE 200 | 1 |
| 6 | 50000038 | BURNER ASSY | 2 |

VC200_E

| | | | |
|-----|-----------|--|---|
| N/A | 50003393 | BURNER REPAIR KIT | 1 |
| 7A | 50000919 | VALVE ASSY NG | 1 |
| 7B | 50000470 | VALVE ASSY LP | 1 |
| 8 | 50000356 | HEAT PLATES (SET OF 2) | 1 |
| 9 | 50000099 | SHELF SIDE RIGHT | 1 |
| 10 | 50000441 | END CAP SHELF RIGHT | 1 |
| 11 | 50000442 | END CAP SHELF LEFT | 1 |
| 12 | 50000431 | ELECTRODE MAIN SHORT | 1 |
| 13 | 50000523 | ELECTRODE MAIN LONG | 1 |
| 14 | 50000047 | BURNER (ROTISSERIE) ASSY | 1 |
| 15 | 50000466 | ELECTRODE (ROTISSERIE) | 1 |
| 16 | 50000093 | AXLE | 1 |
| 17 | 50000357 | SMOKER BOX ASSY | 1 |
| 18 | 50000043B | FLASH TUBE | 1 |
| 19 | 50000430 | DEFLECTOR (OVEN) | 1 |
| 20 | VCCG1A | COOKING GRIDS (SET OF 3 ONLY) | 1 |
| 21A | 50000130 | PANEL BASE R CHARCOAL | 1 |
| 22 | 50000439 | OVEN ELECTRODE | 1 |
| 23 | 50000438 | IGNITOR KIT (Push button NOT included) | 1 |
| 24 | 50000076 | CONTROL KNOB | 4 |