

VC30

REF #	Part #	Part Description	QTY
1	50001310	BOTTOM PANEL ASSY	1
2	50001503	LEG KIT	1
22	50001845	GREASE CUP	1
23	50001319	GREASE CUP HOLDER	1
24	50000431	ELECTRODE - MAIN SHORT	1
25	50000523	ELECTRODE - MAIN LONG	2
26	50000177	LID BUMPERS	4
27	50001418	SUPPORT SHELF LEFT - BLACK	2
28	50001419	SUPPORT SHELF RIGHT - BLACK	2
29	50001482	FRONT LIP	1
30	50000816	IGNITER KIT	1
31	50001413B	SHELF TOP SOLID S/S	2
32	50001390	HARDWARE BAG	1
33	50000984B	SHELF FRONT S/S RIGHT	1
34	50000986B	SHELF FRONT S/S LEFT	1
35	50001506	SIDE PANEL - BLACK	2
N/A	50001491	CABINET PANEL KIT (FRONT + 2 SIDES)	1
N/A	50001643	TEMPERATURE GAUGE	1
N/A	50000007	LOGO	1

VC30

N/A	50000255	PUSH ON NUT	2
3	50001290	FRONT PANEL - CHARCOAL	1
4	50000090	CASTER (POP IN)	4
N/A	50002534	CASTER INSERT	4
5	50001462	BASE ASSY	1
6	50003512	REAR LID ASSY - Also send 50000355.	1
7	50001300B	FLASH TUBE	1
8	50001302	GREASE PAN SUPPORT	2
9	50000892	BURNER GASKET	3
10	50003133	BURNER W. LONG ELECTRODE	2
N/A	50003100	BURNER W. SHORT ELECTRODE	1
11A	50001439	VALVE ASSY - NG	1
11B	50001438	VALVE ASSY - LP	1
12	50001432	CONSOLE ASSY VC 30	1
N/A	50001286B	CONSOLE HEAT SHIELD	1
13A	50001308	REGULATOR	1
13B	50000198	12 NG HOSE	1
14	50000355	PIVOT PIN & BOLT SET Send with lid assembly.	1
15	50001281	FRONT LID ASSY CHARCOAL Also send 5-0355.	1
16	50001301	GREASE PAN	1
17	50001314	COOKING GRIDS (SET OF 2)	1
18	50001327	BEZEL	3

VC30

19	50001328	CONTROL KNOB	3
20	50000777	HEAT PLATE - S/S	3
21	50001311	WARMING RACK - ENAMEL	1

Woodmanspartsplus