

## VCS300SSBI

Reference #	Part #	Description	Quantity Required
1	50003500	ROTISSERIE ASSEMBLY	1
2	50003472	ROTISSERIE ELECTRODE	1
3	50004725	TUBE & ORIFICE ASSEMBLY ROTIS. - LP	1
3a	50004726	TUBE & ORIFICE ASSEMBLY ROTIS. - NG	1
4	50003473	ELECTRODE WIRE ROTISSERIE	1
5	50004801	ROTISSERIE KIT	1
6	50004800	BRACKET ROTISSERIE MOTOR	1
7	50000399	ROTISSERIE SPIT ROD SUPPORT	1
8	50000161	ROTISSERIE MOTOR	1
9	50001326	SPIT ROD	1
10	50004400	FRONT LID ASSEMBLY - SS	1
11	91D0104	WARMING RACK	1
12	50004165	REAR LID ASSEMBLY	1
13	91D0132	BURNER MAIN LONG ELECTRODE	2
14	91D0133	BURNER MAIN SHORT ELECTRODE	1
15	91D0108	ELECTRODE WIRE MAIN LONG - NEED 91D0107 FOR ELECTRODE	2
16	91D0109	ELECTRODE WIRE MAIN SHORT - NEED 91D0107 FOR ELECTRODE	1
16a	91D0107	ELECTRODE ONLY - MAIN	3
17	50000892	BURNER GASKET	3
18	50001300B	FLASH TUBE	1
19	50004373	VC LOGO W/TEMPERATURE GAUGE	1
20	50004223	TEMPERATURE GAUGE	1
21	50004404	CURVED HANDLE GRIP SET	1
22	50000365	LID BUMPER SET (6)	1
23	50000355	HARDWARE SET - LID	1
24	50004720	CONSOLE W/RIV NUT ASSEMBLY	1
25	50004727	WIRING HARNESS	1
26	50003110	BATTERY CASE	1
28	50002533	IGNITOR PLATE	1
29a	50002394	IGNITOR KIT 4 POLE	1
31	50004328	BEZEL ASSEMBLY - LONG STEM	4
33	50004325	CONTROL KNOB - LONG STEM	4
34	50004722	VALVE MANIFOLD ASSEMBLY LP	1
34a	20302815	VALVE MANIFOLD ASSEMBLY NG	1
35	50000672	FLEXIBLE CONNECTOR 28IN.	1
36	50000804	HOSE REGULATOR	1
37	50000915	CONNECTOR HOSE 3/8IN.	1
38	50004736	GREASE TRAY SUPPORT	1
39	50001955B	GREASE TRAY	1
40	50004739	REAR COVER	1
41	50004813	GREASE TRAY FRONT ASSEMBLY	1
42	50004733	RIGHT FASCIA BRACKET	1
43	50004734	LEFT FASCIA BRACKET W/RIV NUT ASSEMBLY	1

44	50000777	HEAT PLATE - SS	3
45	50004318	COOK GRATE - INDIVIDUAL	2
46	50004204	GREASE TRAY HANDLE CURVED	1
47	50004855	HARDWARE BAG	1
48	30005448K	SMOKER BOX KIT	1
N/S	91D0003	USER GUIDE	1
N/S	91D0004	ASSEMBLY INSTRUCTIONS	1
N/S	VCS300BIC	DELUXE COVER (OPTIONAL)	1
N/S	30005587	CONVERSION KIT - LP TO NG	0
N/S	30005588	CONVERSION KIT - NG TO LP	0

Woodmanspartsplus