

VCS322SSBI

Reference #	Part #	Description	Quantity Required
1	50003500	ROTISSERIE BURNER ASSEMBLY	1
2	50003472	ROTISSERIE ELECTRODE	1
3	50004725	TUBE & ORIFICE ASSEMBLY 3 BURNER - LP	1
3a	50004726	TUBE & ORIFICE ASSEMBLY 3 BURNER - NG	1
N/S	50003474	CLIP FOR TUBE AND ORIFICE	1
4	50003473	ROTISSERIE ELECTRODE WIRE	1
5	50004801	ROTISSERIE KIT - w/o spit rod	1
6	50004800	ROTISSERIE MOTOR BRACKET	1
7	50000399	SPIT ROD SUPPORT BRACKET	1
8	91D0131	ROTISSERIE MOTOR ONLY	1
9	50001326	SPIT ROD - 26in	1
10	30005915K	FRONT LID ASSEMBLY - SS	1
11	20302810	WARMING RACK	1
12	30005799	REAR LID ASSEMBLY	1
13	91D0132	BURNER MAIN ANGLE ASSEMBLY - INCL. ELECTRODE AND WIRE	3
15	91D0108	ELECTRODE WIRE - MAIN	3
16	91D0107	ELECTRODE ONLY - MAIN	3
17	50000892	BURNER GASKET	3
18	50001300B	FLASH TUBE	1
19	30005707	LOGO ASSEMBLY	1
20	20300394	TEMPERATURE GAUGE	1
21	50004404	CURVED HANDLE GRIP SET	1
22	50000365	LID BUMPER SET (6)	1
23	50000355	HARDWARE LID SET	1
24	30005977K	CONSOLE w/RIVNUT ASSEMBLY	1
25	50004727	WIRING HARNESS	1
26	50003110	BATTERY CASE	1
28	50002533	IGNITOR PLATE	1
29a	50002394	IGNITOR KIT	1
30	50003002	BEZEL ASSEMBLY - BACKLIT	4
32	50003984	KNOB	4
34	50004722	VALVE MANIFOLD ASSEMBLY - LP	1
34a	20302815	VALVE MANIFOLD ASSEMBLY - NG	1
35	50000672	FLEXIBLE CONNECTOR 28IN.	1
36	91D0111	HOSE REGULATOR - LP	1
37	91D0112	CONNECTOR HOSE - NG	1
38	50004736	GREASE TRAY SUPPORT	1
39	50001955	GREASE TRAY	1
40	50004739	REAR FASCIA COVER	1
41	50004813	GREASE TRAY FRONT ASSEMBLY	1
42	50004733	FASCIA BRACKET RIGHT	1
43	50004734	FASCIA BRACKET LEFT	1
44	50000777	HEAT PLATE - SS	3

45	50004318	COOK GRATES	2
46	50004204	GREASE DRAWER HANDLE CURVED -128mm	1
47	50004855	HARDWARE BAG	1
48	30005448K	SMOKER BOX KIT	1
49	50000198	HOSE 12 FOOT - NG	1
50	20300395	BEZEL FOR TEMPERATURE GAUGE	1
N/S	30005801	USER MANUAL	1
N/S	30005823	ASSEMBLY MANUAL	1
N/S	30005806	PARTS LIST	1
N/S	VCS300BIC	DELUXE COVER	1
N/S	20304635	CONVERSION KIT - LP TO NG	0
N/S	20304639	CONVERSION KIT - NG TO LP	0

Woodmans Parts Plus