

## VCS323SSBI

Reference #	Part #	Description
1	50003500	ROTISSERIE BURNER ASSEMBLY
2	50003472	ROTISSERIE ELECTRODE
3	50004725	TUBE AND ORFICE ASSEMBLY - LP
3a	50004726	TUBE AND ORFICE ASSEMBLY - NG
4	50003473	ELECTRODE ROTISSERIE WIRE
5	94D0134	ROTISSERIE KIT - w/o spit rod
6	20305074	ROTISSERIE MOTOR BRACKET
7	50000399	SUPPORT ROTISSERIE SPIT ROD
8	91D0131	ROTISSERIE MOTOR ONLY
9	50001326	SPIT ROD 38IN
10	30005915	FRONT LID ASSEMBLY - SS
11	30005838	WARMING RACK
12	30005920	REAR LID ASSEMBLY
13	91D0132	BURNER MAIN ANGLE ASSEMBLY - INCL. ELECTRODE AND WIRE
15	91D0108	ELECTRODE WIRE
16	91D0107	ELECTRODE ONLY - MAIN
17	50000892	BURNER GASKET
18	50001300	FLASH TUBE
19	30005707	VC LOGO
20	20300394	TEMPERATURE GAUGE
21	50004119	CURVED HANDLE GRIP SET
22	50000365	LID BUMPER SET (6)
23	50000355	HARDWARE LID SET
24	30005807	CONSOLE w/RIVNUT ASSEMBLY
25	50004727	WIRE HARNESS
26	50003110	BATTERY CASE
27	30002788	IGNITOR PUSHBUTTON
28	50002533	IGNITOR PLATE
29	50001619	IGNITOR MODULE ASSEMBLY
30	50003002	BEZEL
32	50003984	KNOB
34	50004722	VALVE MANIFOLD ASSEMBLY - LP
34a	50004724	VALVE MANIFOLD ASSEMBLY - NG
35	50000672	FLEXIBLE CONNECTOR 28IN.
36	91D0111	HOSE REGULATOR - LP
37	91D0112	CONNECTOR HOSE - NG
38	50004736	SUPPORT GRILL / GREASE TRAY
39	50001955	GREASE TRAY
40	50004739	REAR COVER
41	50004813	GREASE TRAY FRONT ASSEMBLY
42	50004733	FASCIA BRACKET RIGHT
43	50004734	FASCIA BRACKET LEFT
44	20304959	HEAT PLATE

45	50004318	COOK GRATE
46	50004204	DRAWER HANDLE CURVED -128mm
47	50004855	HARDWARE BAG
48	50000198	12 FOOT HOSE - NG
49	20300395	BEZEL FOR TEMPERATURE GAUGE
N/S	20304635	CONVERSION KIT - LP TO NG
N/S	20304639	CONVERSION KIT - NG TO LP
N/S	30005801	USER MANUAL
N/S	20304966	ASSEMBLY MANUAL
N/S	20304963	PARTS LIST
N/S	VCS300BIC	GRILL COVER

Woodmans Parts Plus