

VCS3506

REF #	Part #	Part Description	QTY
1	50003733	BASE ASSY	1
2	50000892	BURNER GASKET	3
24	50003629	FRONT FACIA	1
25	50002534	CASTER INSERT	4
26	50003068	CASTER 3 , X 7/8	4
27	50001328	CONTROL KNOB	3
28	50000777	HEAT PLATE (S. STEEL)	3
29	50003665	COOKING GRIDS (ENAMEL)	2
30	50000790	PLATE COVER - NAT. GAS	1
31	50001845	GREASE CUP	1
32	50001319	GREASE CUP HOLDER	1
33	50003786	HARDWARE BAG	1
34	50000523	ELECTRODE - MAIN - LONG	2
35	50000431	ELECTRODE - MAIN - SHORT	1
36	50000355	PIVOT PIN & BOLT SET Send with lid assembly	1
37	50001643	TEMPERATURE GAUGE	1
38	50000642	HANDLE GRIP SET - CHARCOAL	1
39	50000365	LID BUMPERS (SET OF 6)	1
40	50003670	WARMING RACK	1

VCS3506

N/A	VCDC3S	DELUXE BBQ COVER - FOR SALE ONLY	1
N/A	50003772	KIT - CABINET COMPONENTS LP	1
N/A	50003800	KIT - CABINET COMPONENTS NG	1
N/A	50003776	KIT - SHELVES	1
N/A	50003778	KIT - SHELF SUPPORTS	1
N/A	50003775	FRONT PANEL	1
N/A	50003665	COOKING GRIDS (ENAMEL)	2
N/A	50001301	GREASE PAN - H3	1
N/A	50003787	USER GUIDE	1
N/A	50003807	ASSEMBLY PROCEDURES	1
N/A	50003808	PARTS LIST	1
N/A	10008764	SIZZLING BARBECUE COOKBOOK	1
N/A	50003914	CONVERSION KIT - TO NG	1
N/A	50003915	CONVERSION KIT - TO LP	1
3	50003618	BURNER ASSEMBLY	3
4	50001300B	FLASH TUBE	1
5	50003673B	CONSOLE HEAT SHIELD	1
6	50003724F	HOSE HEAT SHIELD	1
7	50003628	CONSOLE (PRINTED)	1
8	50000816	IGNITER KIT	1
9A	50003615	VALVE ASSY - LP	1
9B	50003616	VALVE ASSY - NG	1

VCS3506

10	50003648	BEZEL	3
11A	50000804	REGULATOR ASSY LP	1
11B	50000915	HOSE REGULATOR - NG	1
11C	50000198	12 HOSE NG	1
12	50003512	REAR LID ASSY - Also send p/n 50000355.	1
13	50003640	FRONT LID ASSY - Also send p/n 50000355.	1
14	50001301	GREASE PAN	1
15	50003649	CABINET PANEL - RIGHT	1
16	50003650	CABINET PANEL - LEFT	1
17	50003651	CABINET BOTTOM ASSEMBLY	1
18	50003775	FRONT PANEL	1
19	50003683	SHELF, LEFT	1
20	50003685	SHELF, RIGHT	1
21	50003558B	SIDE BURNER LID ASSEMBLY	1
22	50001418	REAR SHELF SUPPORT - LEFT	2
23	50001419	REAR SHELF SUPPORT - RIGHT	2