

VCS4007_4017_4027_4037

Ref#	Part#	Description	Qty Reqd
1	50003846	CABINET ASSEMBLY - LEFT	1
2	50003847	CABINET ASSEMBLY - RIGHT	1
3	50003621	DOOR ASSEMBLY	1
4	50003732	BASE ASSEMBLY	1
5	50001842B	GREASE PAN	1
6	50000879B	FLASH TUBE	1
7	50000892	BURNER GASKET	4
8	50003133	BURNER TUBE WITH LONG ELECTRODE	2
9	50003100	BURNER TUBE WITH SHORT ELECTRODE	2
10	50000431	ELECTRODE MAIN SHORT	2
11	50000523	ELECTRODE MAIN LONG	2
12A	50003583	VALVE, MANIFOLD ASSEMBLY (LP)	1
12B	50003584	VALVE, MANIFOLD ASSEMBLY (NG)	1
13	50003815	REGULATOR ASSEMBLY (LP)	1
14	50000920	CONNECTOR HOSE (NG)	1
15	50000198	HOSE NG - 12 FT	1
16	50000777	HEAT PLATE	4
17	VCCG1A	COOKING GRIDS (PACK OF 3)	1
18	50003500	ROTISSERIE ASSEMBLY	1
19A	50003816	TUBE & ORIFICE ASSEMBLY (LP)	1
19B	50003817	TUBE & ORIFICE ASSEMBLY (NG)	1
20	50003472	ROTISSERIE ELECTRODE - INCLUDED IN PART 50003462.	1
21	50003473	ROTISSERIE ELECTRODE WIRE	1
22	50004071	CONSOLE	1
23	50003586B	CONSOLE REINFORCEMENT	1
24	50001011	IGNITER PUSH BUTTON	1
25	50001619	IGNITER MODULE- PUSHBUTTON NOT INCL. (ON OLDER VC GRILLS SOME MODIFICATION MAY BE REQUIRED TO MOUNT)	1
26	50003849	WIRING HARNESS	1
27	50003002	BEZEL ASSEMBLY (BACKLIT)	5
28	50003984	KNOB ASSEMBLY - BACKLIT (GRAY)	5
28	50004109	SPRING CLIP (PACK OF 6)	1
29	50003514	REAR LID ASSEMBLY (REQUIRES PART 50000355)	1
30A	50004017	FRONT LID ASSEMBLY (REQUIRES PART 50000355)	1
30B	50004018	FRONT LID ASSEMBLY (REQUIRES PART 50000355)	1
30C	50004019	FRONT LID ASSEMBLY (REQUIRES PART 50000355)	1
30D	50004020	FRONT LID ASSEMBLY (REQUIRES PART 50000355)	1
31	50001643	TEMPERATURE GAUGE	1
32	50004069	HANDLE GRIP SET	1
33	50000365	LID BUMPERS (SET OF 6)	1
34	50000355	PIVOT PIN & BOLT SET - SEND WITH LID ASSEMBLY	1
35	50000802	WARMING RACK (ENAMEL)	1
36	50003669	SHELF LIGHT ASSEMBLY (PERISCOPE)	1
37	50003116	ROTISSERIE KIT (SPIT ROD NOT INCLUDED)	1
38	50000161	ROTISSERIE MOTOR	1
39	50000286	ROTISSERIE SPIT ROD	1
40	50003563	SIDE BURNER ASSEMBLY	1
41	50000115	ELECTRODE - SIDE BURNER	1
42	50001044	BURNER (FOR THE SIDE BURNER)	1
43	50000113	CONTROL KNOB - SIDE BURNER	1
44A	50001046	SIDE BURNER VALVE (LG)	1
44B	50001045	SIDE BURNER VALVE (NG)	1
45	50000070	IGNITER KNOB - SIDE BURNER	1

VCS4007_4017_4027_4037

46	50000111	ROTARY IGNITER - SIDE BURNER	1
47	50001035	SIDE BURNER GRATE	1
48	50003679	CONDIMENT TRAY - RIGHT	1
49	50003680	CONDIMENT TRAY - LEFT	1
50	50003598	LEFT SHELF	1
51	50003581	RIGHT SHELF	1
52	50001418	SHELF SUPPORT BLACK	1
53	50001419	SHELF SUPPORT BLACK	1
54	50003558B	SIDE BURNER LID	1
55	50003577	DOOR HANDLE	1
56	50001845	GREASE CUP	1
57	50003681	MAIN HARDWARE BAG	1
58	50003068	CASTER 3 X 7/8	4
59	50000972	BOLT 6 (32 X 1/4 SS, ATTACHES BEZELS TO CONSOLE)	10
61	50000315	SCREW 8 - 18 X 1/2 SS	6
62	50001911	BOLT 1/4 - 20 X 5/8 SS	24
63	50002110	BOLT 1/4 - 20 X 5/8 BLACK	10
64	50001055	SCREW 8 - 18 X 1/2 BLACK	16
65	VCDC4SB	DELUXE BBQ COVER	1

Woodmanspartsplus