

VCS5006 / VCS5007 / VCS5016 / VCS5017 / VCS5026 / VCS5027 / VCS5036 / VCS5037

Reference #	Part #	Description	Quantity Required
1	50003846	CABINET ASSEMBLY - LEFT	1
2	50003847	CABINET ASSEMBLY - RIGHT	1
3	50003661	DOOR ASSEMBLY - LEFT	1
4	50003660	DOOR ASSEMBLY - RIGHT	1
5	50003601	DRAWER ASSEMBLY	1
6	50000313	DOOR HANDLE	3
7	50001418	SHELF SUPPORT BLACK	1
8	50001419	SHELF SUPPORT BLACK	1
9	50003598	LEFT SHELF	1
10	50003581	RIGHT SHELF	1
11	50003558B	SIDE BURNER LID	1
12	50003679	CONDIMENT TRAY - RIGHT	1
13	50003680	CONDIMENT TRAY - LEFT	1
14	50003730	BASE ASSEMBLY	1
15	50003133	BURNER TUBE WITH LONG ELECTRODE	3
16	91D0108	ELECTRODE WIRE MAIN LONG - NEED 91D0107 FOR ELECTRODE	3
16A	91D0107	ELECTRODE ONLY - MAIN	3
17	50003100	BURNER TUBE WITH SHORT ELECTRODE	2
18	50000431	ELECTRODE MAIN SHORT	2
19	50001300B	FLASH TUBE	2
20	50000892	BURNER GASKET	5
21	50000777	HEAT PLATE - SS	5
21	50000156	COOK GRATE - SINGLE APPROX 16 X 9	4
23	50001619	IGNITOR MODULE- PUSHBUTTON NOT INCL. (ON OLDER VC GRILLS SOME MODIFICATION MAY BE REQUIRED TO MOUNT)	1
24	50002788	IGNITOR PUSH BUTTON	1
25	50003462	ROTISSERIE BURNER ASSEMBLY	1
26A	50000819	TUBE & ORIFICE ASSEMBLY (LP)	1
26B	50000818	TUBE & ORIFICE ASSEMBLY (NG)	1
27	50003472	ROTISSERIE ELECTRODE - INCLUDED IN PART 50003462.	1
28	50003473	ROTISSERIE ELECTRODE WIRE	1
29	50003589B	CONSOLE REINFORCEMENT	1
30	50003591	CONSOLE	1
31	50002157	GREASE PAN	1
32	50001845	GREASE CUP	1
33A	50002826	VALVE, MANIFOLD ASSEMBLY (LP)	1
33B	50002827	VALVE, MANIFOLD ASSEMBLY (NG)	1
34	50003815	HOSE REGULATOR ASSEMBLY - 2 SIDED LP	1
35	50000920	CONNECTOR HOSE (NG)	1
36	50000198	HOSE NG - 12 FT	1
37	50000972	BOLT 6 (32 X 1/4 SS, ATTACHES BEZELS TO CONSOLE)	12
38	50003002	BEZEL ASSEMBLY (BACKLIT)	6

39	50003003	KNOB ASSEMBLY (BACKLIT)	6
40	50003850	WIRING HARNESS	1
41	30005789	REAR LID ASSEMBLY (REQUIRES PART 50000355)	1
42	50000355	PIVOT PIN & BOLT SET - SEND WITH LID ASSEMBLY	1
43A	50004021	FRONT LID ASSEMBLY (REQUIRES PART 50000355)	1
43B	50004022	FRONT LID ASSEMBLY - BLACK (REQUIRES PART 50000355)	1
43C	50004023	FRONT LID ASSEMBLY - GREEN (REQUIRES PART 50000355)	1
43D	50004024	FRONT LID ASSEMBLY - BRONZE (REQUIRES PART 50000355)	1
44	50001643	TEMPERATURE GAUGE - SUBS to 20300395 & 20300394	1
45	50000642	GRIP HANDLE SET	1
46	50000365	LID BUMPERS (SET OF 6)	1
49	50001035	SIDE BURNER GRATE	1
50	50001044	BURNER (FOR THE SIDE BURNER)	1
51A	50001046	SIDE BURNER VALVE (LG)	1
51B	50001045	SIDE BURNER VALVE (NG)	1
52	50000115	ELECTRODE - SIDE BURNER	1
53	50000113	CONTROL KNOB - SIDE BURNER	1
54	50000070	IGNITOR KNOB - SIDE BURNER	1
55	50000111	ROTARY IGNITOR - SIDE BURNER	1
58	50000161	ROTISSERIE MOTOR	1
61	50003681	MAIN HARDWARE BAG	1
62	50003068	CASTER 3 X 7/8	4
63	50001911	BOLT 1/4 - 20 X 5/8 SS	24
64	50002110	BOLT 1/4 - 20 X 5/8 BLACK	12
66	50000315	SCREW 8 - 18 X 1/2 SS	6
67	50002433	BOLT 6 - 32 X 3/8 SS	6
68	50001026	SCREW 8 - 18 X 3/8 ZINC	7
69	50001055	SCREW 8 - 18 X 1/2 BLACK	16
N/S	50003749	KIT - CONDIMENT TRAY	1
N/S	50003832	KIT - MAIN PARTS	1
N/S	50003669	SHELF LIGHT ASSEMBLY (PERISCOPE)	1
N/S	50003110	BATTERY CASE (SHELF LIGHT)	1
N/S	50003116	ROTISSERIE KIT (SPIT ROD NOT INCLUDED)	1
N/S	50003563	SIDE BURNER ASSEMBLY	1
N/S	50003630	TANK PULL-OUT KIT (LP MODELS ONLY)	1
N/S	50002157	GREASE PAN	1
N/S	50000156	COOK GRATE - SINGLE APPROX 16 X 9	4
N/S	50000889	WARMING RACK (ENAMEL)	1
N/S	50000962	ROTISSERIE SPIT ROD 38	1
N/S	VCDC5SB	DELUXE BBQ COVER	1
N/S	10008764	SIZZLING BARBECUE COOKBOOK	1
N/S	50003530	CABINET PANEL - REAR	1
N/S	50003566	SIDE BURNER HARDWARE BAG	1
N/S	50002198	CABINET FORM BLOCK - THERMOPLASTIC	2