

1	50003032	BASE ASSY	1
2	50001844B	GREASE PAN SUPPORT	2
N/A	50000875	ROTISSERIE BURNER	1
N/A	50001156	ROTISSERIE BURNER BRACKET	2
18	50003129	ROTISSERIE ELECTRODE	1
19	50003018	LID ASSY - FRONT. Also send p/n 50000355.	1
20	50002532	LOGO	1
21	50001643	TEMPERATURE GAUGE	1
22	50000355	PIVOT PIN & BOLT SET Send with lid assembly.	1
23a	50003026	DOOR ASSY - RIGHT	1
23b	50003051	DOOR ASSY - LEFT	1
24	50003029	DRAWER ASSY	1
25	50000889	WARMING RACK (ENAMEL)	1
26	50003012	CONDIMENT SUPPORT - LEFT	1
27	50003013	CONDIMENT SUPPORT - RIGHT	1
28	50001845	GREASE CUP	1
29	50003011	UTENSIL HOOK (PACK OF 3)	1
30	50000090	CASTER	4
31	50003330	SIDE BURNER SHELF ASSY - RIGHT	1
32	50003059	SIDE BURNER LID ASSY	1
	50003314	SHELF SUPPORT ASSY (W. BRACKETS) - RT	1
33	50003333	SHELF ASSY - LEFT	1
	50003315	SHELF SUPPORT ASSY (W. BRACKETS) - LT	1
34	50001227	COOKING GRIDS (SET OF4)	1

35	50000777	HEAT PLATE S/S	4
36	50003043M	SIDE BURNER ASSY (COMPLETE)	1
37	50003050	SIDE BURNER GRATE (ENAMEL)	1
38	50001044	SIDE BURNER - BURNER	1
39	50000111	SIDE BURNER - ROTARY IGNITOR 2 TERM	1
40	50000115	SIDE BURNER ELECTRODE	1
41	50000113	SIDE BURNER CONTROL KNOB	1
42	50000070	SIDE BURNER IGNITOR KNOB	1
43	50002888	CYLINDER RETAINER - LP MODEL ONLY	1
44	50000365	LID BUMPER (SET OF 6)	1
45	50000962	ROTISSERIE SPIT ROD 38 LONG	1
46	50000287	ROTISSERIE FORK KIT	1
47	50000161	ROTISSERIE MOTOR	1
48	50000399	ROTISSERIE SPIT ROD SUPPORT	1
49	50003115	ROTISSERIE MOTOR BRACKET	1
50	50003198	STABILIZER BRACKET ASSY	1
51	50000313	DOOR HANDLE DELUXE	3
N/A	50003056	HARDWARE KIT	1
N/A	50003000	HARNESS - BACKLIT KNOB FOR CONSOLE	1
N/A	50003105	HARNESS SHELF LIGHT	1
N/A	50003106	SIDE SHELF LIGHT ASSY - PERISCOPE	1
N/A	50003109	RETAINING RING LIGHT	1
N/A	50003110	BACKLIGHT BATTERY CASE - CONSOLE AA	1
N/A	50003283	BATTERY SHROUD 9V	1

N/A	50003304B	CONDIMENT TRAY - LH	1
N/A	50003282B	CONDIMENT TRAY - RH	1
N/A	50002033	POP IN MAGNETS (DOORS)	2
N/A	50002828B	CABINET (ROUND) - LEFT SIDE S/S	1
N/A	50002829B	CABINET (ROUND) - RIGHT SIDE S/S	1
N/A	50003021	BOTTOM PANEL BLK	1
N/A	50003022	BACK PANEL	1
N/A	50002198	CABINET FORM/NUT ASSY	2
N/A	VCGP1A	GRIDDLE - replaces one cooking grid.	1
N/A	50003433	CONSOLE REPAIR KIT	1
N/A	50003116	ROTISSERIE - NO spit rod	1
N/A	50000962	SPIT ROD Not in Rotisserie Kit	1
N/A	VC303-3666	BBQ COVER - SALE ITEM	1
3	50002157	GREASE PAN ASSY	1
4	50000880B	FLASH TUBE	1
5	50000892	BURNER GASKET	5
6	50000523	LONG ELECTRODE	3
N/A	50000431	SHORT ELECTRODE	2
7	50003100	BURNER TUBE with SHORT ELECTRODE	2
	50003133	BURNER TUBE with LONG ELECTRODE	3
N/A	50003457	BURNER REPAIR KIT	5
8a	50002826	VALVE ASSY - LP	1
8b	50002827	VALVE ASSY - NG	1
9a	50002900	HOSE & REGULATOR LP	1

		FOR THE MAIN & SIDE BURNER	1
9b	50002901	HOSE & REGULATOR NG	1
		FOR THE MAIN & SIDE BURNER	1
10	50003023	CONSOLE (PRINTED)	1
11	50003024B	CONSOLE REINFORCEMENT	1
12	50002533	IGNITOR PLATE	1
13	50001619	IGNITOR MODULE (NO push button)	1
NS	50001011	IGNITOR PUSH BUTTON (Send with 50001619)	1
14	50003002	BEZEL ASSY (BACKLIT)	6
15	50003003	KNOB (BACKLIT)	6
16	50003516	LID ASSY - REAR. Also send p/n 50000355.	1
17		ROTISSERIE BURNER ASSY (see below):	1
N/A	50000961	ROTISSERIE BURNER HOUSING/SCREEN	1

Woodman's parts plus