

Parts Diagram

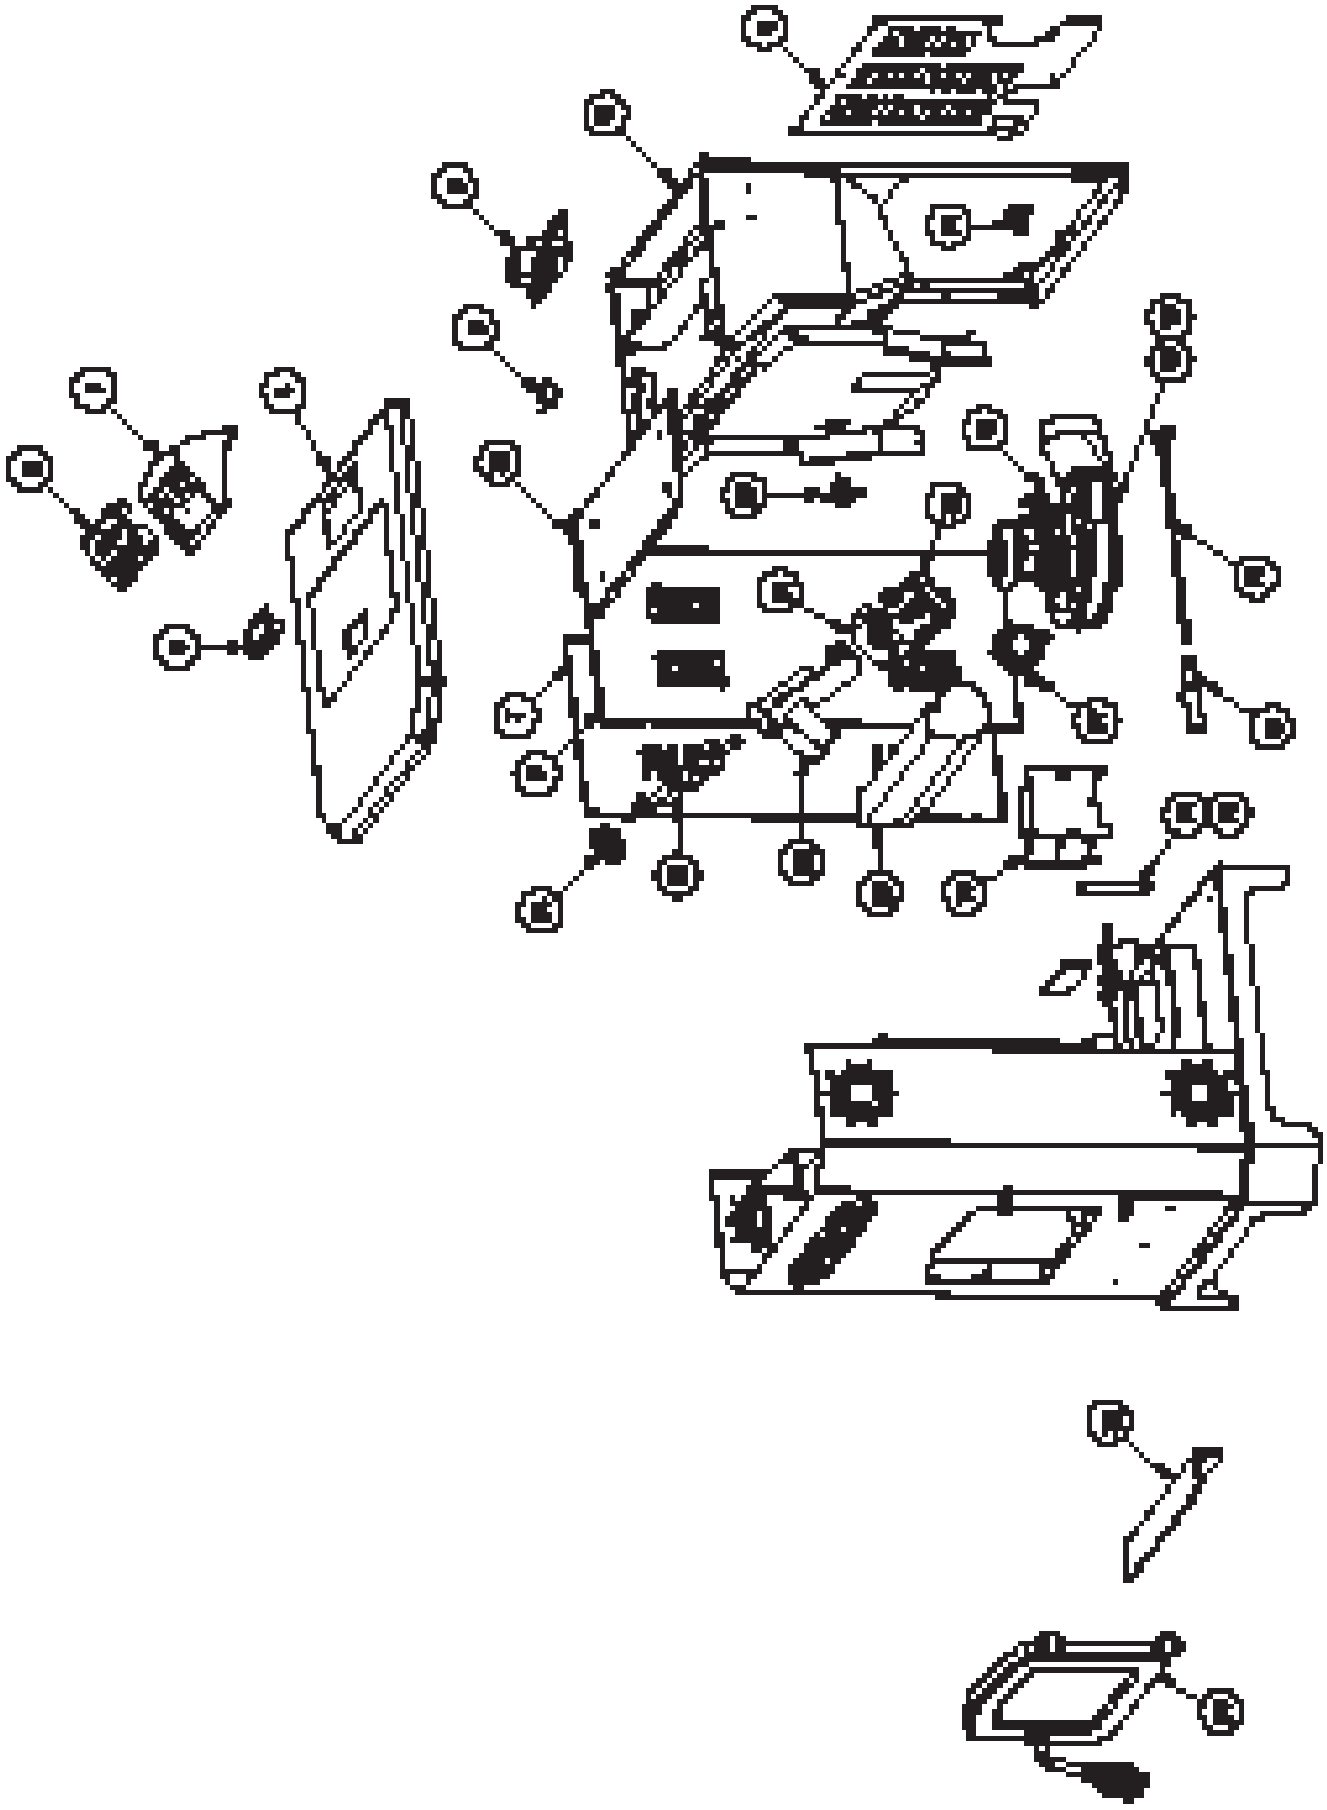

Parts List

Key	Part #	Description	Qty
1	892199	Housing, PCBA Controller	1
2	80630	PCBA, Controller	1
3	891148	Lid Latch	1
4	892669	Top Weldment	1
5	80491	Lid Switch	1
6	80631	PCBA	1
7	892683	Side Panel, Right	1
8	892684	Side Panel, Left	1
9	892674	Vented Back Panel	1
10	892660	Hopper	1
11	80462	AC Electrical Connector	1
12	80602	Exhaust Blower	1
13	88166	Gasket, Exhaust Blower	1
14	892668	Ash Clean-Out Covers	2
15	88258	Gasket, Ash Clean-out	2
16	80607	Igniter	1
17	83538	Shaft Collar - Ignitor Tube	1
18	69762	Burnpot	1
19	80599	T-Disc, Exhaust	1
20	80529	Auger Motor	1
21	892665	Auger Motor Mounting Bracket	1
22	892661	Auger Housing Weld.	1
23	892677	Auger	1
24	892664	Agitator Bushing	1
25	80455	T-Disc, Room Air	1
26	80709	Room Blower	1
27	80549	Vacuum Switch	1
28	88176	Insulation Blanket	1
29	892685	Hearth Plate	1
30	892682	Door Assembly	1
*	80710	Wiring Harness	1
*	80711	Thermistor	1
* Item Not Shown			

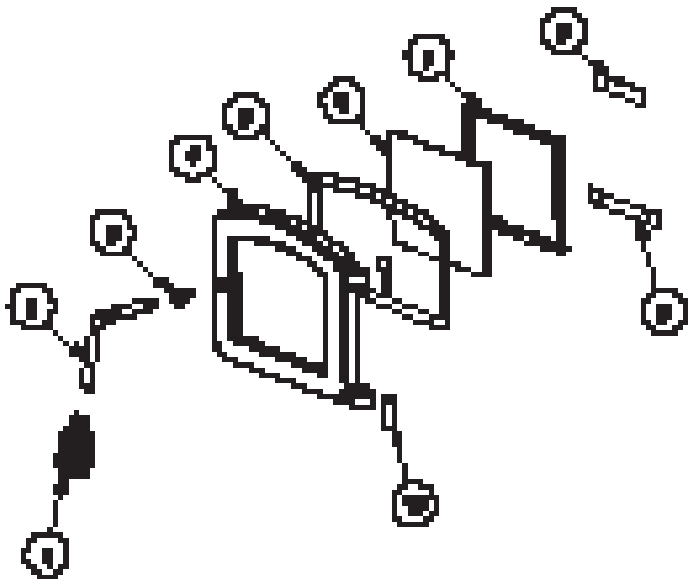

Key	Part #	Description	Qty
1	891135	Handle, Spring (Lg-Nickel)	1
2	892854	Door Handle	1
3	AC09185	Roller Ball Kit	1
4	40793	Feed Door Frame	1
5	88066	5/8" Rope Gasket	4 ft
6	892686	Door Glass	1
7	88087	Window Gasket	2.5 ft
8	28220	Top Glass Brace	1
9	28221	Bottom Glass Brace	1
10	83709	Door Pin	2

IN ORDER TO MAINTAIN WARRANTY, COMPONENTS MUST BE REPLACED USING VOGELZANG PARTS PURCHASED THROUGH YOUR DEALER OR DIRECTLY FROM VOGELZANG. USE OF THIRD PARTY COMPONENTS WILL VOID THE WARRANTY.