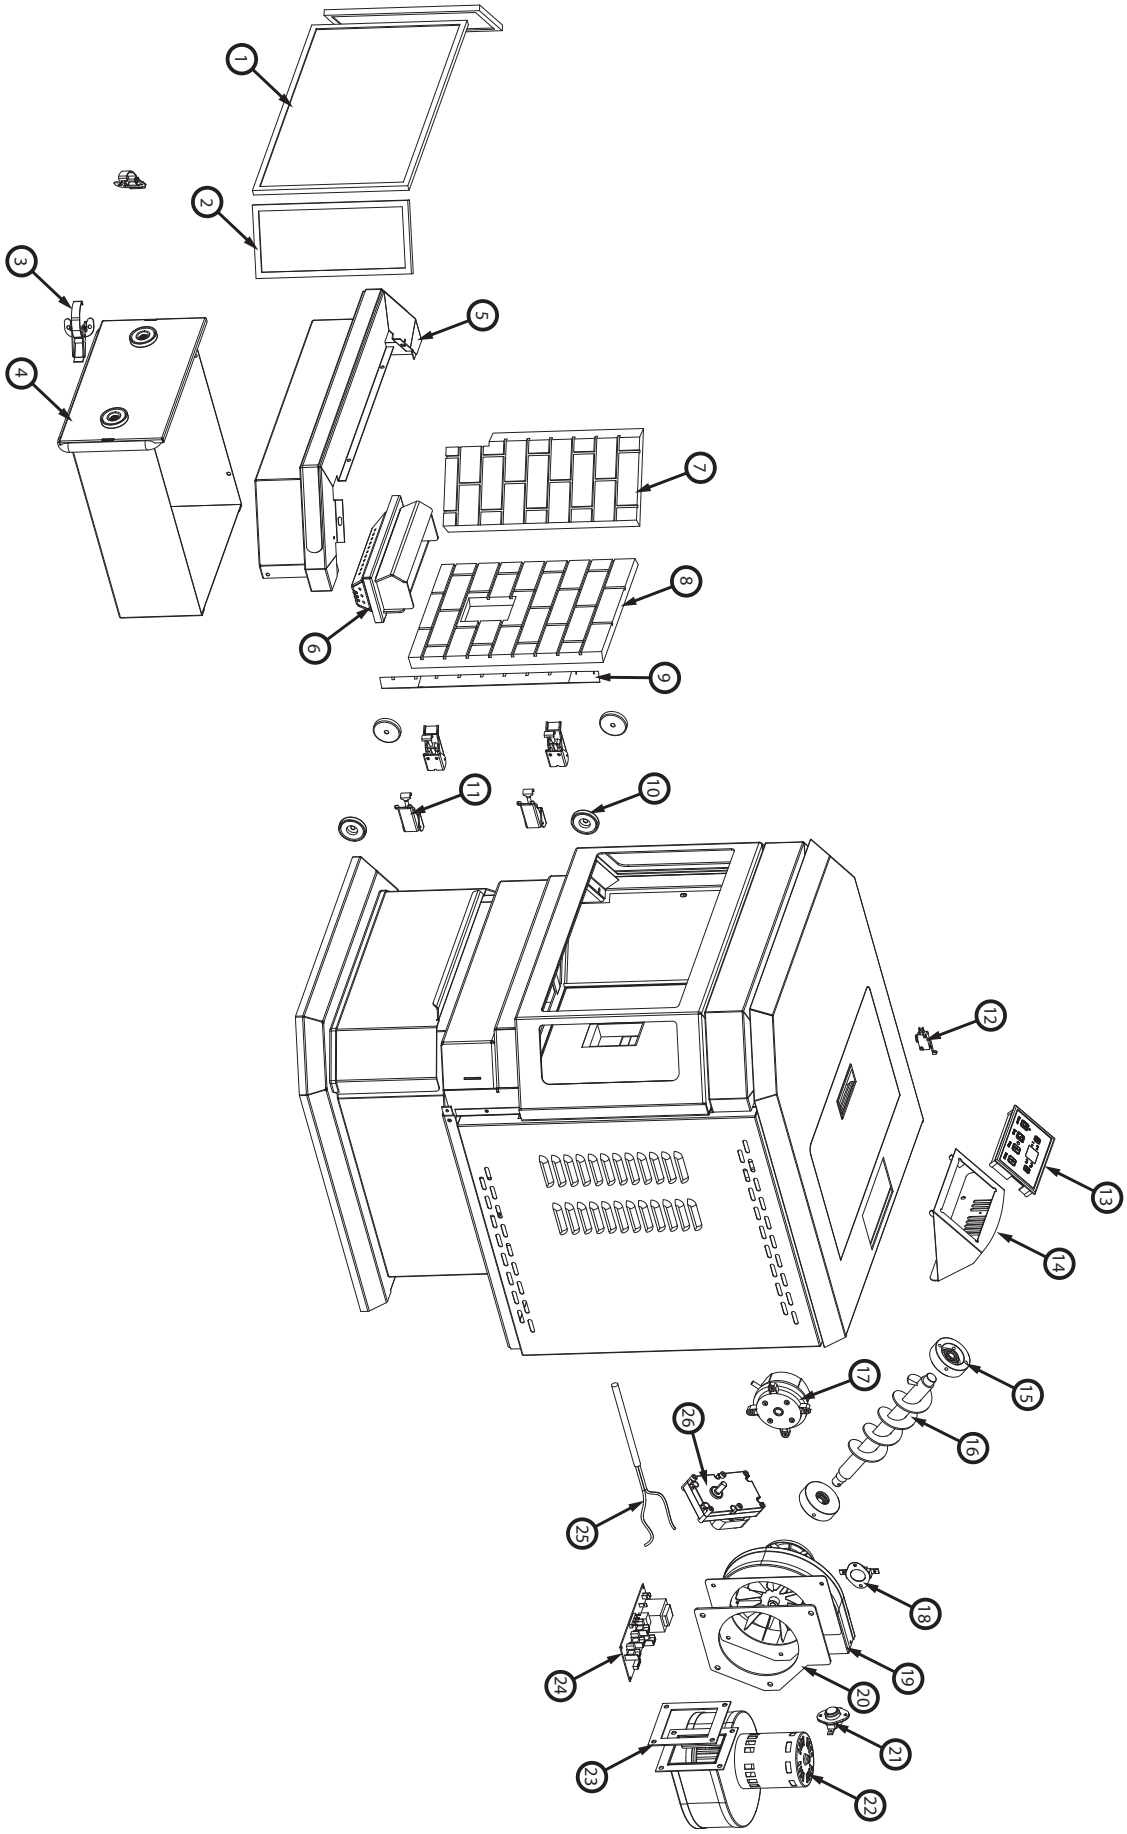


© 2023 United States Stove Company

PARTS LIST

Key	Part#	Description	Qty
1	88161	Glass w/Gasket, Center	1
2	88162	Glass w/Gasket, Side	2
3	891997	Latch, Ash Pan	2
4	891996	Ash Pan	1
5	892037	Hearth Trim	1
6	891994	Burn Pot	1
7	88165	Brick Panel - Right	1
8	88163	Brick Panel - Center	1
9	88164	Brick Panel - Left	1
10	891995	Magnet	4
11	891540	Latch, Door	4
12	80491	Micro Switch	1
13	80676	PCB, Circuit Board	1
14	892199	Housing, PCBA Controller	1
15	891998	Bushing	2
16	891999	Auger	1
17	80549	Pressure Switch	1
18	80599	Switch, Low-Temp	1
19	80602	Blower, Exhaust	1
20	88166	Gasket, Exhaust Blower	1
21	80601	Switch, Hi-Temp	1
22	80622	Blower, Convection	1
23	88167	Gasket, Convection Blower	1
24	80631	PCBA Board	1
25	80604	Igniter	1
26	80606	Motor, Auger	1
*	892064	Decorative Log (not shown)	1

IN ORDER TO MAINTAIN WARRANTY, COMPONENTS MUST BE REPLACED USING ASHLEY PARTS PURCHASED THROUGH YOUR DEALER OR DIRECTLY FROM ASHLEY. USE OF THIRD PARTY COMPONENTS WILL VOID THE WARRANTY.

© 2023 United States Stove Company