

# Technical Data Sheet

## Heritage Model 8020 Outside Air Adaptor Installation

*Assembly 90-57500*

Publish Date: 6/11/2001

### **ASSEMBLY CONTENTS:**

- 1 – Heritage 8020 Outside Air Box with Adaptor
- 31"- 3/4" Gasket Tape
- 14 - 8-32 X 3/8" Pan HD Type F Screws

### **TOOLS REQUIRED:**


- Stubby Phillips Screwdriver

**BEFORE YOU BEGIN:** Before you install the outside air kit, determine where the duct for the outside air will terminate. You can attach the duct to either the back center of the box or the center of the right side by changing the position of the screw-on plates and the adaptor.


**IF YOU INTEND TO ALSO USE THE OPTIONAL BLOWER,** you will not be able to use the rear outlet on the outside air box. When using a blower the outside air duct must connect to the right side of the outside air box.

### **PROCEDURE:**

1. Peel off the paper backing from the flat gasket. Apply the gasket to the top lip of the outside air box.
2. From the back of the stove, slide the outside air box under the stove and position it so that it lines up with the six holes which are pre-drilled and tapped in the bottom casting. Holding the outside air box in this position, screw in the six 8-32 x 3/8" screws to hold the outside air box in place.
3. Connect the outside air box to the wall termination using a 3" metal flex pipe (supplied by others).

 **NOTE:** When considering placement of the duct from the outside of the house to the hearth, keep in mind the need to avoid structural members of the wall. Locate the termination of the duct on the outside of the wall in such a manner as to preclude the possibility of obstruction by snow, leaves, or other materials. We recommend screening the outside termination with a 1/4" X 1/4" mesh rodent screen, and covering with a rain/wind proof hood (flex pipe, outside termination, mesh and hood supplied by others. Contact your dealer for availability.

### OUTSIDE AIR KIT COMPONENTS

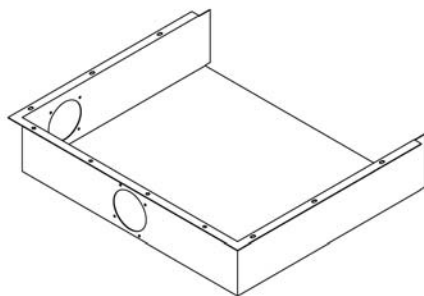

(1) OUTSIDE AIR BOX W/SCREWS



(1) BLANK COVER W/SCREWS



INSTALLATION INSTRUCTIONS



(1) INLET W/SCREWS

### **Outside Air Adaptor Kit**

Attach the intake to the desired location with four of the screws provided. Block the other opening by attaching the cover blank with four of the screws provided. The Heritage outside air adaptor box Measures 12-1/4" x 19-1/8" x 4".