




MEECO'S MANTEL PROTECTOR



- Kit Contents:**
- 1 Mantel Protector
 - 4 Anchors
 - 4 Ceramic Spacers
 - 4 Pan Head Screws

INSTRUCTIONS:

1. Locate stove in fireplace.
2. Place mantel protector under mantel in desired location.
3. Using a 1/4" bit, drill holes through the protector and into the bottom of the mantel (one hole in each corner of the mantel).
4. Remove mantel protector and insert anchors into drilled holes.
5. Insert each screw through the protector, the ceramic spacer and into the installed anchors.
6. Tighten all screws.

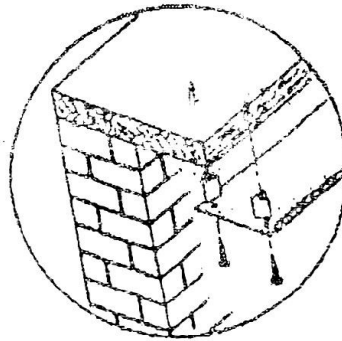

INSTALLATION TIPS:

1. Make certain mantel protector extends completely to the rear of the mantel.
2. Caution, bending the mantel protector can alter the protector face pitch.

CAUTION: Be careful when working with metal. Sharp edges can be very dangerous. Wear gloves and eye protection.

OBSERVE ALL LOCAL BUILDING AND FIRE CODES.

MEECO Manufacturing Company, Inc.
dba MEECO / HEATSAFE
1.800.426.9393
www.meecomfg.com