


Morsø 5660

Replacement Brick Instructions

Important Note: The replacement bricks may differ in appearance from the original factory brick set. This is normal and will not affect the operation of the stove.

1.

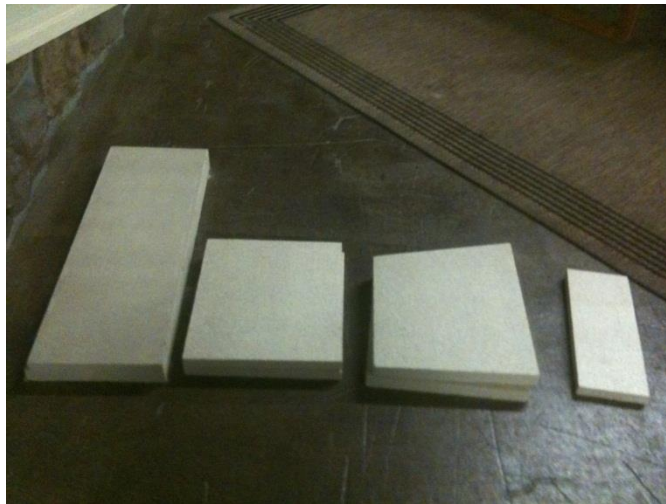

Left to right: Back (one piece), floor (two pieces), sides (two pieces), smoke deflector

2. Begin by removing the existing brick liners.



3. Next, insert the back. Pay close attention to the orientation of the tab.



4. Then insert the sides, one at a time.



5. The next things to go in are the floor panels. Again pay close attention to the orientation of the cutouts in the panels.



6. Lastly don't forget to place the smoke baffle above the cast baffle plate.

