

#Z42-50A

FIREBRICK KIT

For models #ABY, #Z-42, #Z-42-CD

KOZY HEAT
FIREPLACES

This kit includes:

(26) 4-1/2" x 9" firebrick 'A'


(5) 4-1/2" x 7" firebrick 'B'

(2) 2-1/2" x 9" firebrick 'C'


1. Starting at the bottom, position the bottom vertical firebricks first then the top horizontal firebricks as shown in **Step 1** (FIGURE 1) along the back wall of the firebox.
2. Place the firebricks on the bottom of the firebox as shown in **Step 2** in FIGURE 1.
3. Starting at the back, position the firebricks under the firebrick brackets along each side of the firebox, as shown in **Step 3** in FIGURE 1.

4. Verify the bevel in the firebrick refractory panel is to the right of the firebox as shown in **Step 4** (FIGURE 1) and the panel rests on the (4) stainless steel pipes at the top of the firebox.
5. Lay the firebricks shown in **Step 5** in FIGURE 1 over the firebrick refractory panel.
6. With the 45° flange down, slide the firebrick retainer between the top of the first stainless steel pipe and firebrick. Push retainer back until it is against the front of the firebrick and under the refractory panel, as shown in **Step 6** (FIGURE 1).
7. Set retainer down on top of the pipe. The 45° flange on the firebrick retainer should now be behind the first pipe (**Step 6**, FIGURE 1).


Step 1

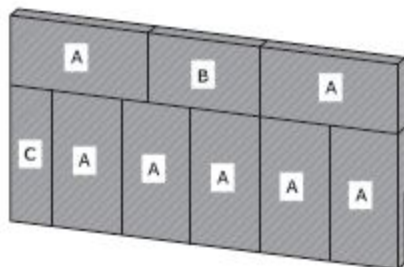


Step 2

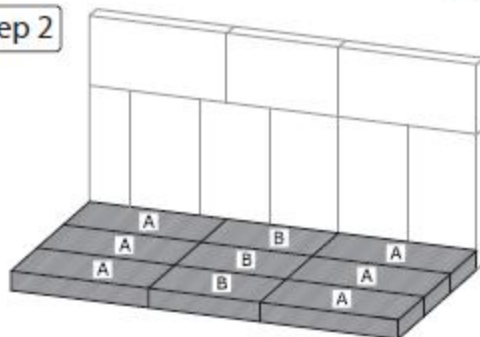


Step 3

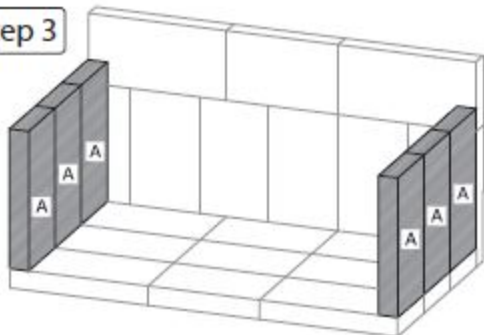


Step 4

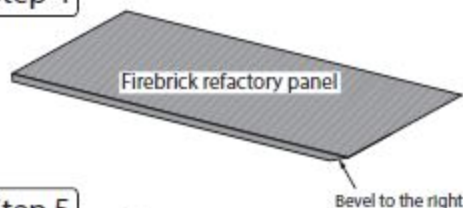

Step 5

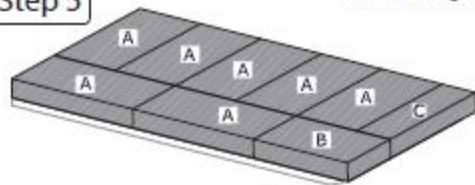

Step 6

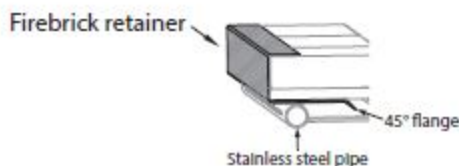

Firebrick 'A' = 4 1/2" x 9" (26x)
Firebrick 'B' = 4 1/2" x 7" (5x)
Firebrick 'C' = 2 1/2" x 9" (2x)

FIGURE 1 Firebrick Installation