



# Fyre-Stones Set "A" (564 HO) Installation


(sku 94700760)

## Packing List

- Set of 19 Fyre-Stones
- Rear Stone Grid
- Left Stone Tab
- Pilot Stone Tab
- Right Stone Tab
- (2) 8-32 x 3/8" Screws
- Front Stone Grid

## Items Required

- A portion of a Crushed Glass Kit (each kit includes four 2.5 lb. bags):
  - Platinum (94500580)
  - Bronze (94500581)
  - Cobalt (94500582)

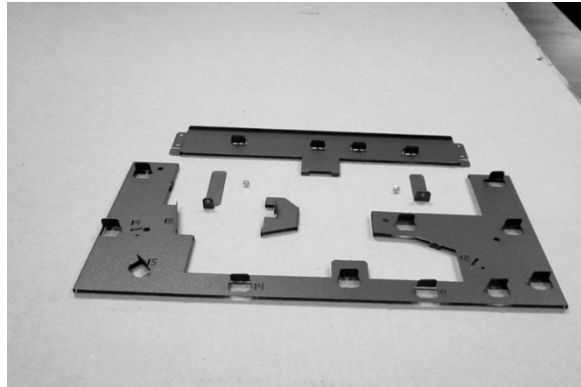

## Compatibility

- 564 HO with Diamond-Fyre Burner




## Installation Tips



Install the stones after the firebacks and stone grid are in place.

## Stone Grid Installation



1. Place the front stone grid upside down on a non-scratching surface. Insert the left stone tab **from below** through the slot as shown below. Secure the tab with one of the included screws.

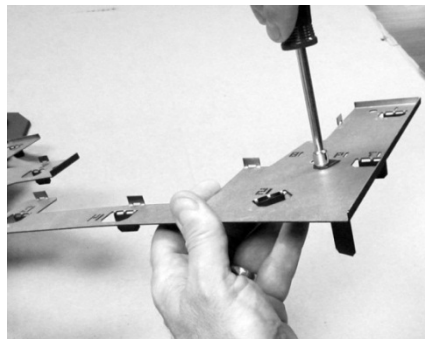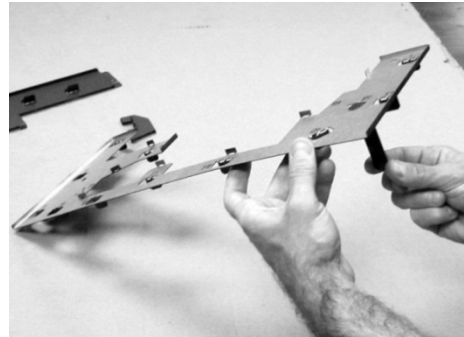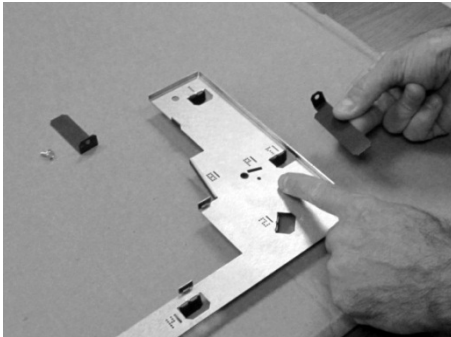


# Fyre-Stones Set "A" (564 HO) Installation

(sku 94700760)

2. Insert the right stone tab through the slot on the front stove grid as shown below. Secure with the remaining screw.

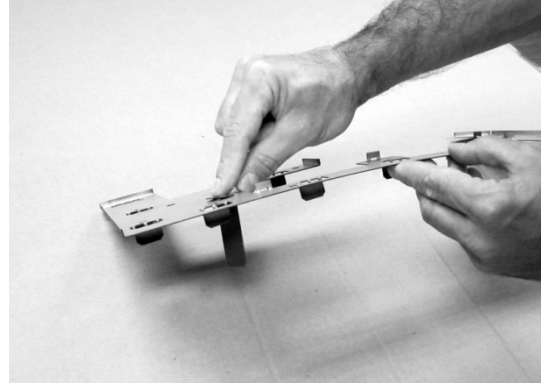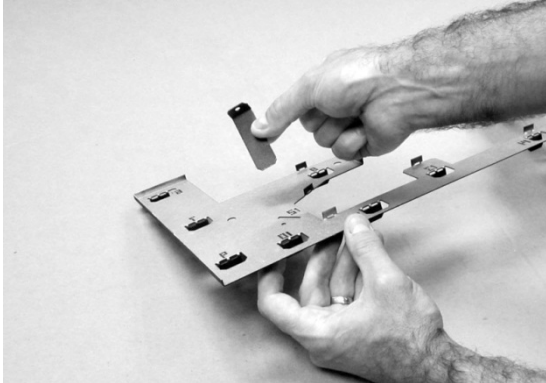

The front stone grid should now look like the photo below.

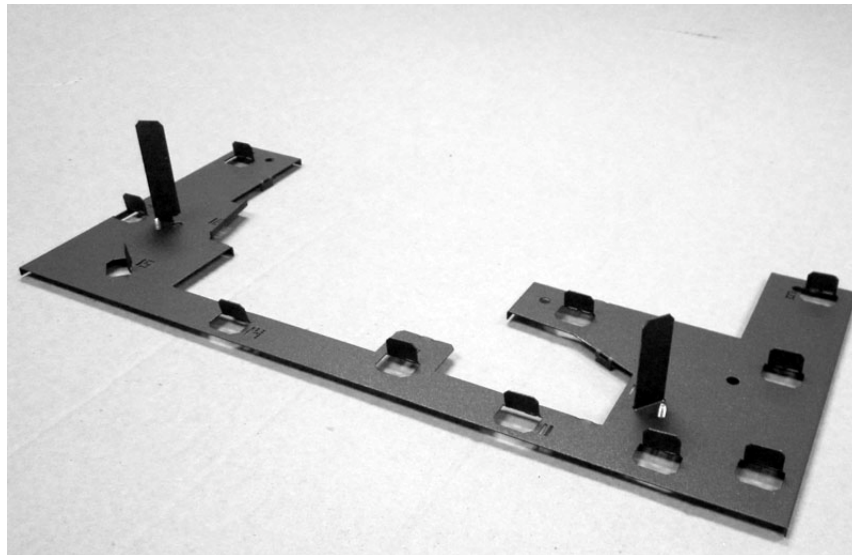

3. Remove the rear air deflector from the fireplace as shown below. It is held in place with four (4) screws (keep the screws).







# Fyre-Stones Set "A" (564 HO) Installation

(sku 94700760)

4. Secure the rear stone grid to the fireplace as shown below (use the screws removed in step 3).

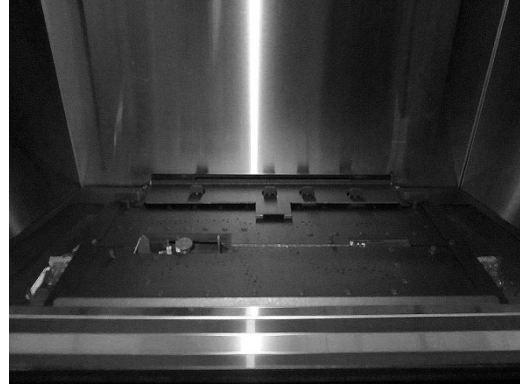

5. Install the front stone grid onto the burner.

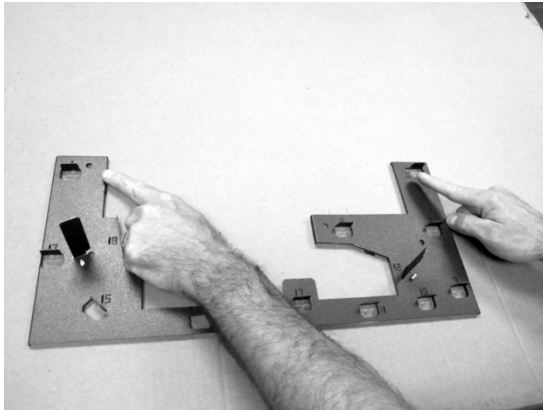




# Fyre-Stones Set "A" (564 HO) Installation

(sku 94700760)

6. Place the pilot stone tab on the pilot bracket as shown below.

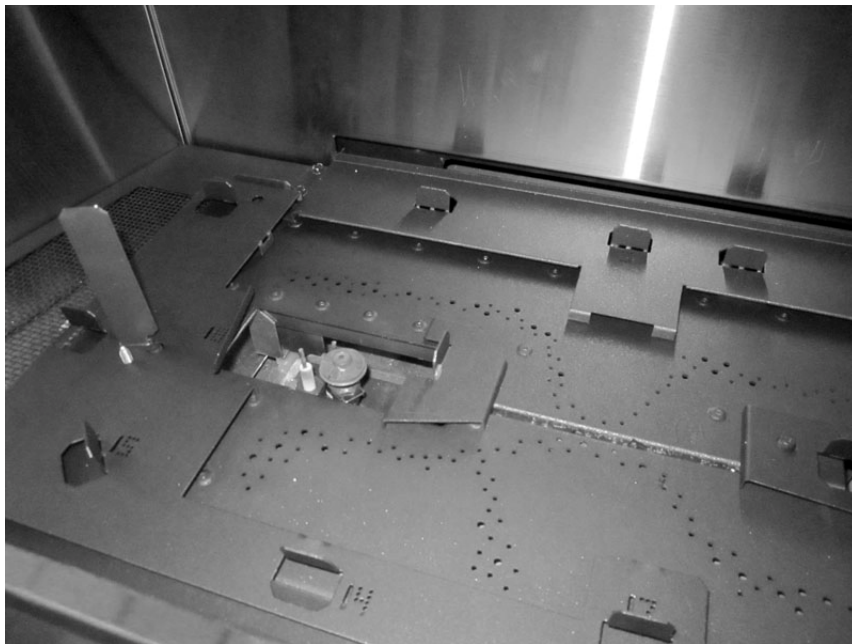

## Placing the Stones



Each stone has a number etched into and a slot. Place the stones onto the stone grid, matching the number on the stone to the number on the grid. EXAMPLE: Stone marked "3" is inserted over the tab marked "3" on the stone grid.



**NOTE: Numbers on the stones always face the rear of the firebox.**






TRAVIS INDUSTRIES  
HOUSE OF FIRE

# Fyre-Stones Set "A" (564 HO) Installation

(sku 94700760)

Starting with stone number 1, place the stones in numerical order on the stone grid, paying close attention to the notch/tab alignment and making sure the numbers face the rear of the firebox. The stone placement sequence is shown below.

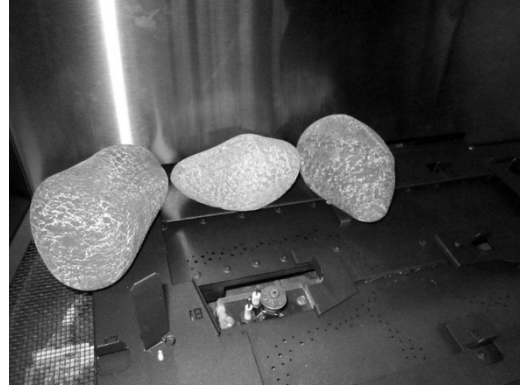



# Fyre-Stones Set "A" (564 HO) Installation

(sku 94700760)



NOTE: Stone number 16 has no slot. It is placed on the screen to the left, as shown below.



The photos below show all stones placed inside the firebox.





TRAVIS INDUSTRIES  
HOUSE OF FIRE

# Fyre-Stones Set "A" (564 HO) Installation

(sku 94700760)

## Crushed Glass Installation

This media set requires **2.5 lbs.** of 1/4" American Fireglass Crushed Glass


**Glass Purchased from Travis:**

(1) 2.5 lb. bag

**If Measuring Bulk Glass**  
(1/4" American Fireglass)

Use 2 1/2 Rounded Cups (600ml rounded)

NOTE: A level measuring cup (240ml) = 0.95 lbs., so each cup should be slightly rounded.

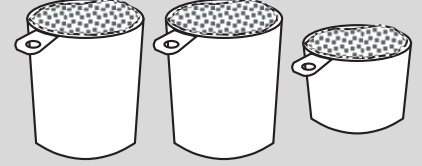

**It is better to use too little glass than too much.** Excessive glass, especially when using propane (LP), will lead to sooting. Place the glass as thinly as possible over the burner ports for optimum burner performance.

Carefully pour the glass around the floor of the firebox as shown below. Now we are working with your inner artist. Here you must pay attention to create the best possible look. For hard to reach areas, you can use a teaspoon to ensure all black surfaces are covered.



The completed installation should look like the photos below.



The pilot area must be kept clear of glass to provide quick burner ignition.

