Parlor Vent Free Fireplace LOG PLACEMENT

## LOG PLACEMENT

 Place Log #1 on burner by aligning notches on bottom side of each end of log with the rear corners of the burner. The light fixture should partially set in cutout of rear log. Ensure log is sitting firmly on burner and is locked in where it cannot slide forward on the burner. Figure 18

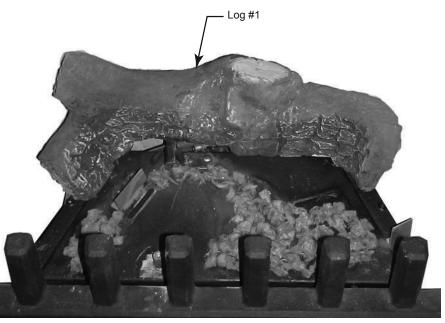


Figure 18 -Place Log #1

.G719

 Place Log #2 on burner by aligning hole in bottom of log with pin located at front of burner. Gently push log down until it comes in contact with burner. Push top of log towards rear placing the rectangular notch on log #2 onto the rectangular protrusion on log #1. Figure 19

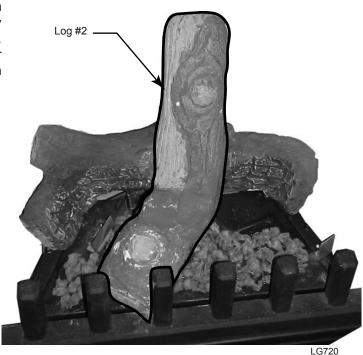


Figure 19 -Place Log #2

18 90D0093

LOG PLACEMENT Parlor Vent Free Fireplace

3. Place Log #3 by placing rectangular notch on bottom of log onto the rectangular protrusion on top of log #2. Place the other end of log #3 between the front grate and the small 'L' shaped bracket located on the right side of the burner. Allow the end of the log to rest on the burner. Figure 20

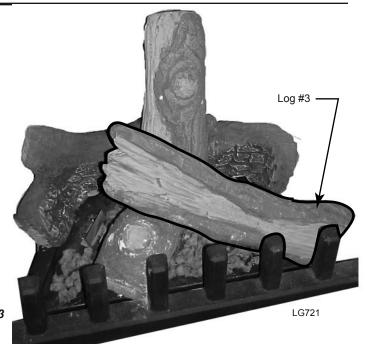


Figure 20 -Place Log #3

4. Place Log #4 by placing rectangular notch on bottom of log onto rectangular protrusion on front of log #2. Place other end of log between grate bar and rear log #1 resting log #4 on burner. Figure 21

Log #4

Figure 21 - Place Log #4

90D0093 19