

Before you begin - This unit is supplied with six (6) ceramic fiber logs. Do not handle these logs with your bare hands. **Always wear gloves to prevent skin irritation from ceramic fibers.** After handling the logs, wash your hands gently with soap and water to remove any traces of fibers.

WARNING The positioning of the logs is critical to the safe and clean operation of this heater. Sooting and other problems may result if the logs are not properly and firmly positioned in the appliance. Never add additional logs or embellishments such as pine cones or vermiculite to the heater. Only use the logs supplied with the unit. Failure to position the parts in accordance with diagrams below or to use only parts specifically approved for this heater may result in property damage or personal injury.

INSTALL LOGS AND ROCK WOOL (EMBER MATERIAL) IN FIREBOX

1. Break up rock wool (ember material) into small fluffy pieces. Place evenly as shown. Do not exceed 1" layer covering all round burner ports. Refer to Figures 15 and 16.
2. Apply a light layer of embers to the ports. **NOTE:** Excessive amount of embers will affect the flame and the flame appearance.

WARNING Do not use the entire bag of rock wool to cover burner area.

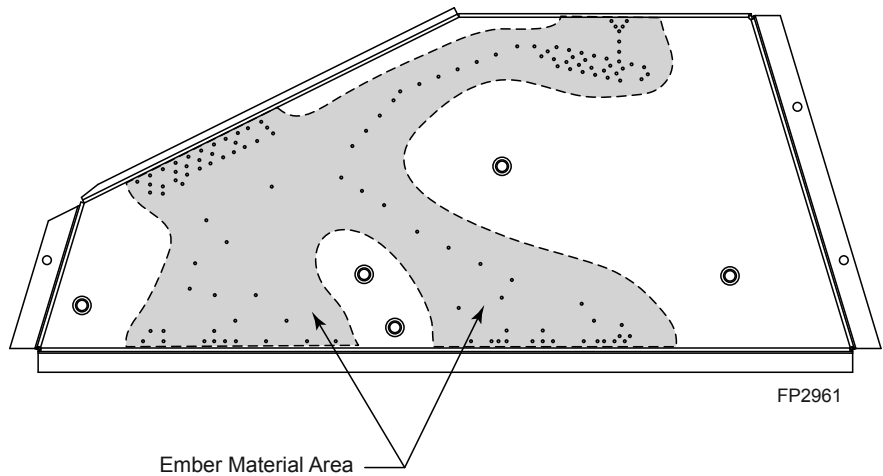


Figure 15 - Ember Material Area


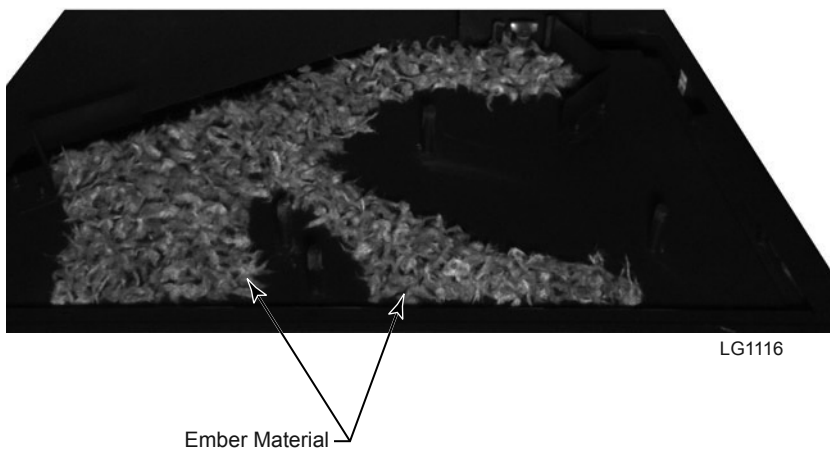


Figure 16 - Place Ember Material

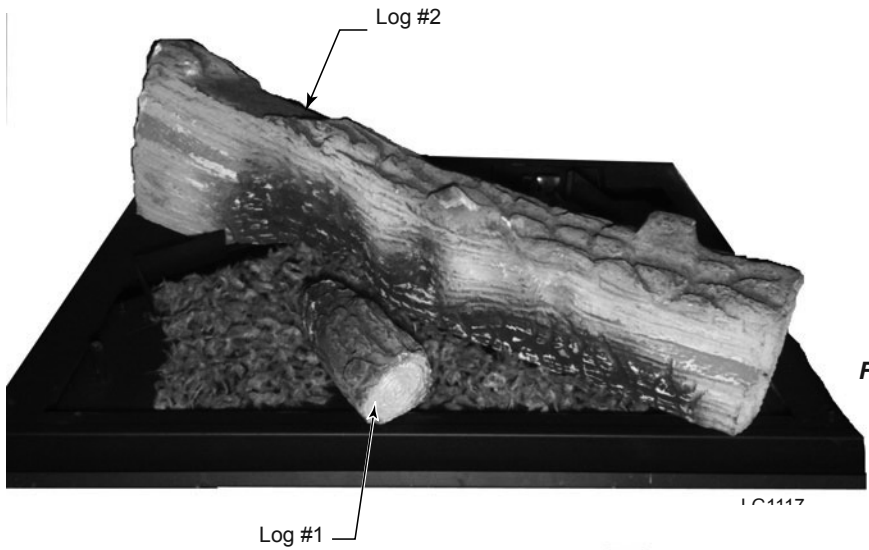

- 3. Align the two pin holes on Log #1 onto the burner. *Figure 17*
- 4. Place log #2 by aligning the holes to the burner pin. *Figure 17*

Figure 17

- 5. Position log #3 so that it is resting on log #2. *Figure 18*



Figure 18



- 6. Position log #4 so that the bottom right end is resting on the pad on log #3 and the left end is resting on the flat spot on log #2. *Figure 19*

Figure 19

- 7. Align log #5 hole to the burner pin and rest on log #2. *Figure 20*



Figure 20

LG1120

- 8. Align the cutout on the bottom of log #6 and fit it into log #5. *Figure 21*



Figure 21

LG1121