Before you begin - This unit is supplied with six (6) ceramic fiber logs. Do not handle these logs with your bare hands. **Always wear gloves to prevent skin irritation from ceramic fibers.** After handling the logs, wash your hands gently with soap and water to remove any traces of fibers.

ARNING

The positioning of the logs is critical to the safe and clean operation of this heater. Sooting and other problems may result if the logs are not properly and firmly positioned in the appliance. Never add additional logs or embellishments such as pine cones or vermiculite to the heater. Only use the logs supplied with the unit.

Failure to position the parts in accordance with diagrams below or to use only parts specifically approved for this heater may result in property damage or personal injury.

INSTALL LOGS AND ROCK WOOL (EMBER MATERIAL) IN FIREBOX


- 1. Break up rock wool (ember material) into dime-sized pieces. Place evenly as shown. Do not exceed 1" layer covering all round burner ports. *Refer to Figures 16a and 16b.*
- 2. Do not cover rectangular slots located at rear of burner.

/ARNING


Do not use the entire bag of rock wool to cover burner area.

Ember Material Area

Figure 16a -Ember Material Area

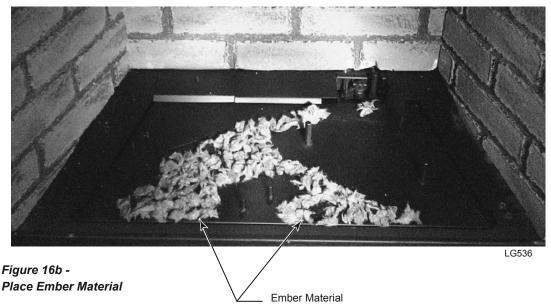


20 83D0511

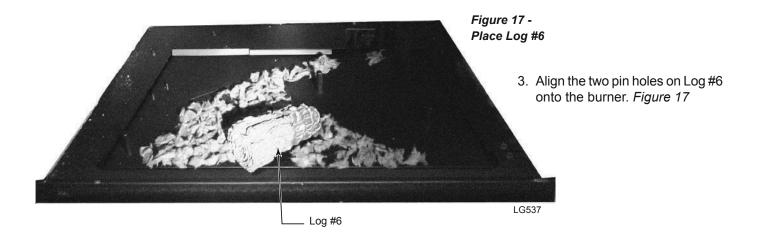

4. Place log #1 by aligning the holes to the burner pin. Figure 18

LG538

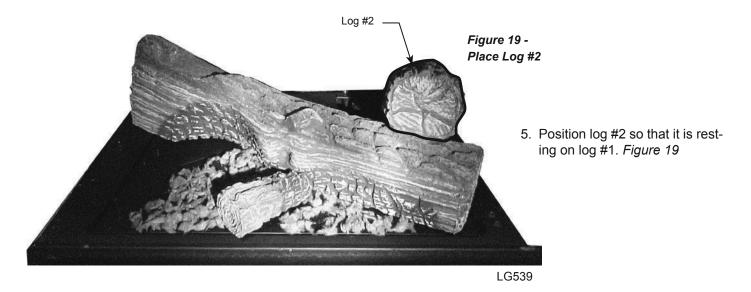


83D0511 21

6. **ILDV20:** Position log #3 so the bottom right end is resting behind log #2 and the left end is resting on the flat area on log #2.

ILDV30/40: Position log #3 so that the bottom right end is resting on the pad on log #2 and the left end is resting on the flat spot on log #1. *Figure 20*

Figure 20 -Place Log #3

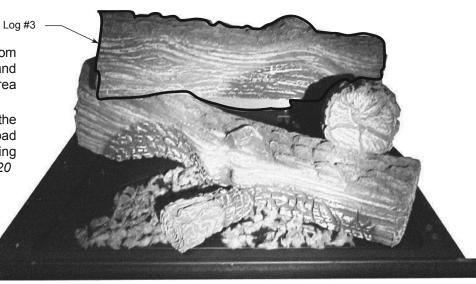

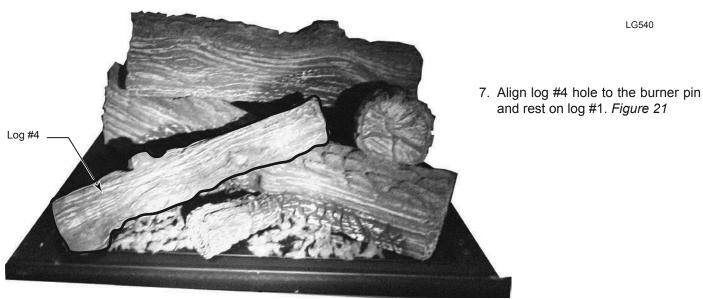


Figure 21 - LG541
Place Log #4

8. Align the cutout on the bottom of log #5 and fit it into log #4. Figure 22

Figure 22 -Place Log #5

