

Installation of the Log Set

(Refer to the following images in this section for log set assembly)

1. Remove the packaging material around the log set assembly. Be careful not to damage the log set when unpacking.



Photo 4 – Burner without Log Set Detail

2. Place log 1 on the burner in its channel as shown.



Photo 5 – Log 1 in Position

3. Place Log 2 into the channel in the burner with the narrow end resting on log 1 as shown.

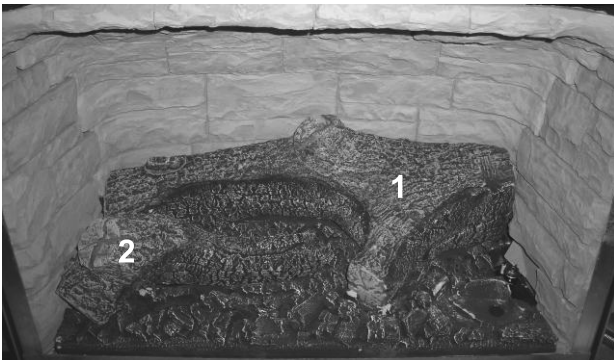


Photo 6 – Log 2 in Position

4. Place log 3 as shown.

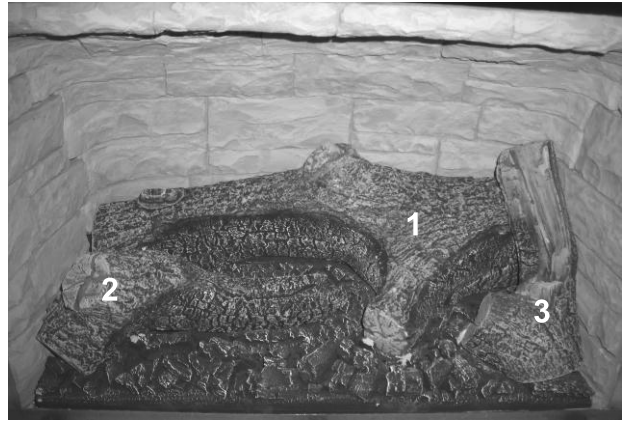


Photo 7 – Log 3 in Position

5. Place log 4 on top of logs 1 and 2 as shown. (Note the indentation on the bottom of log 4 fits onto the nub of log 1)

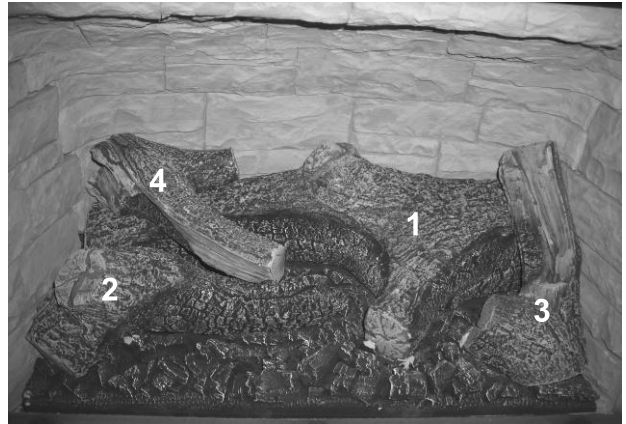


Photo 8 – Log 4 in Position

6. Place small tufts of the Platinum Bright Embers on the burner and log surfaces for additional glow as desired – **do not block burner ports**.

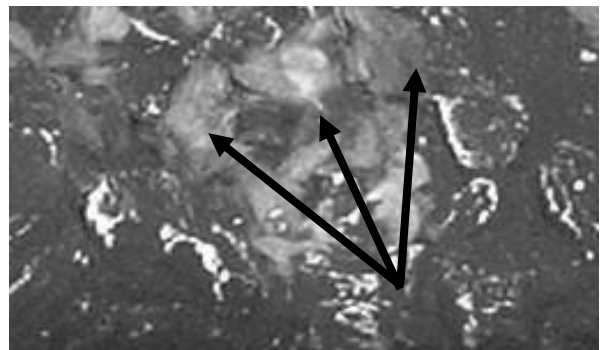


Photo 9 –Platinum Bright Embers (Enlarged to Show Detail)